


1 Trig 4Cyl Wasted Spark 5V Mag


Harness Required: E01 Ver 1.1 & E04 Ver 1.0

Last Changed: 22/04/2008


Drawing Ver: 1.0

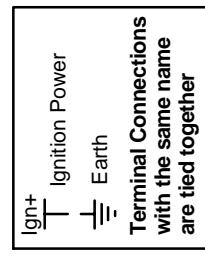






Led's Functions
Yellow - Power
Green - RPM Pulse

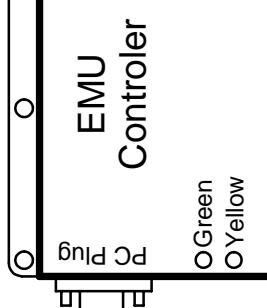

Use 2.5mm or larger wire if enclosure is not earthed to body

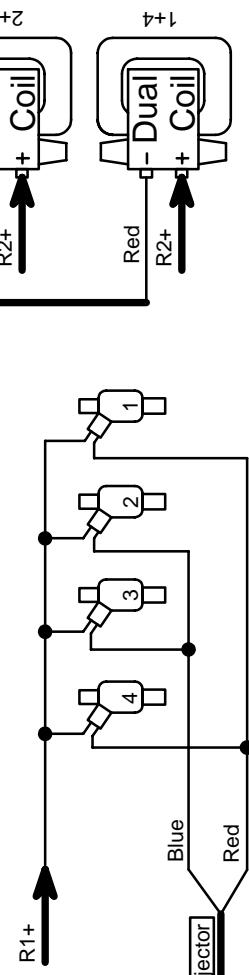


Crank Gear Configuration
60-2, 36-1, 36-2, 18-1,
32&1 Toyota 2.7i,
Pulse=Cylinders,
All Single Sensor Distributors

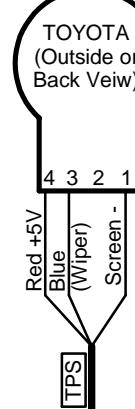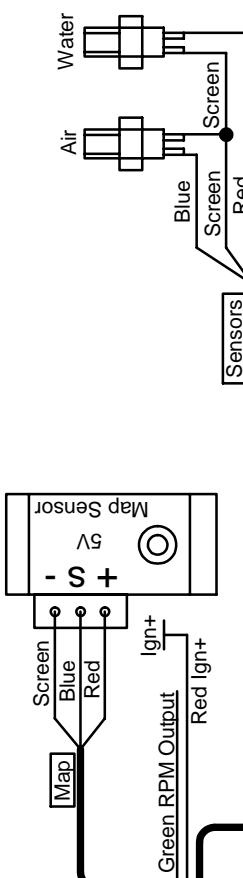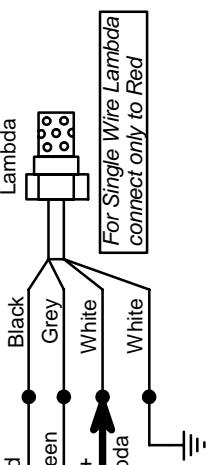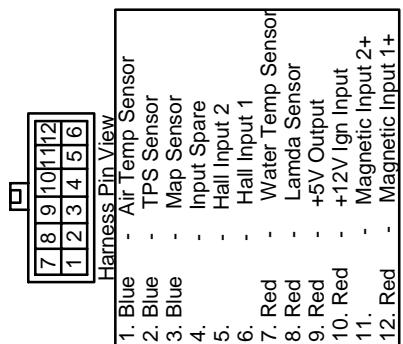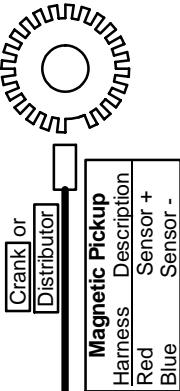

Yellow GP Output 1
Green GP Output 2
Max Load =
500mA to Ground
Connect to Relay

Connect to enclosure

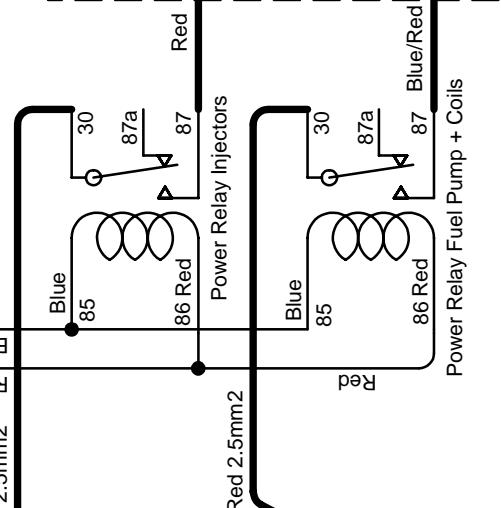

at the battery terminal if
Connect supply wires

Power Relay Fuel Pump + Coils

