

# Nissan 4Cyl W/Spark 5V Hall


Harness Required: E03 Ver 1.0 & E04 Ver 1.0

Last Changed: 24/04/2008

Drawing Ver: 1.0








Ign+ Ignition Power  
 Earth  
**Terminal Connections with the same name are tied together**

**Led's Functions**  
 Yellow - Power  
 Green - RPM Pulse

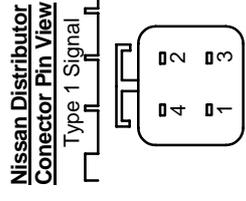

**Optic / Hall Pickup**

Harness	Description
1. Screen	Earth
2. Red	+12V
3.	Degrees Pulse
4. Blue	Slot Fire Pulse

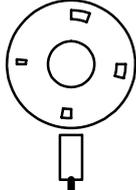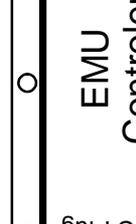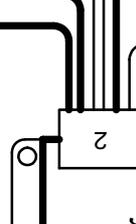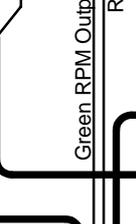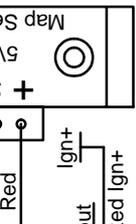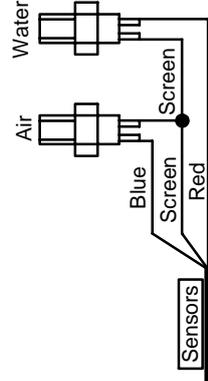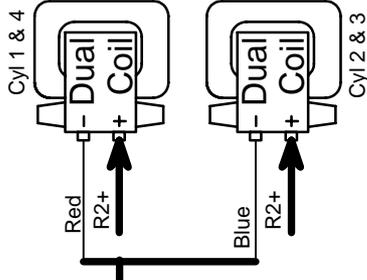

Optic Distributor Sensor

**Harness Pin View**



6	7	8	9	10
1	2	3	4	5

- Blue - Coil 2 & 3
- Blue - Injector 1&4
- Blue - Fuel Relay
- Yellow - GP Output 1
- Red - Coil 1 & 4
- Red - Injector 2&3
- Green - RPM Output
- Green - GP Output 2

**Harness Pin View**

7	8	9	10	11	12
1	2	3	4	5	6

- Blue - Air Temp Sensor
- Blue - TPS Sensor
- Blue - Map Sensor
- Input Spare
- Hall Input 2
- Hall Input 1
- Red - Water Temp Sensor
- Red - Lamda Sensor
- Red - +5V Output
- Red - +12V Ign Input
- Red - Magnetic Input 2+
- Magnetic Input 1+

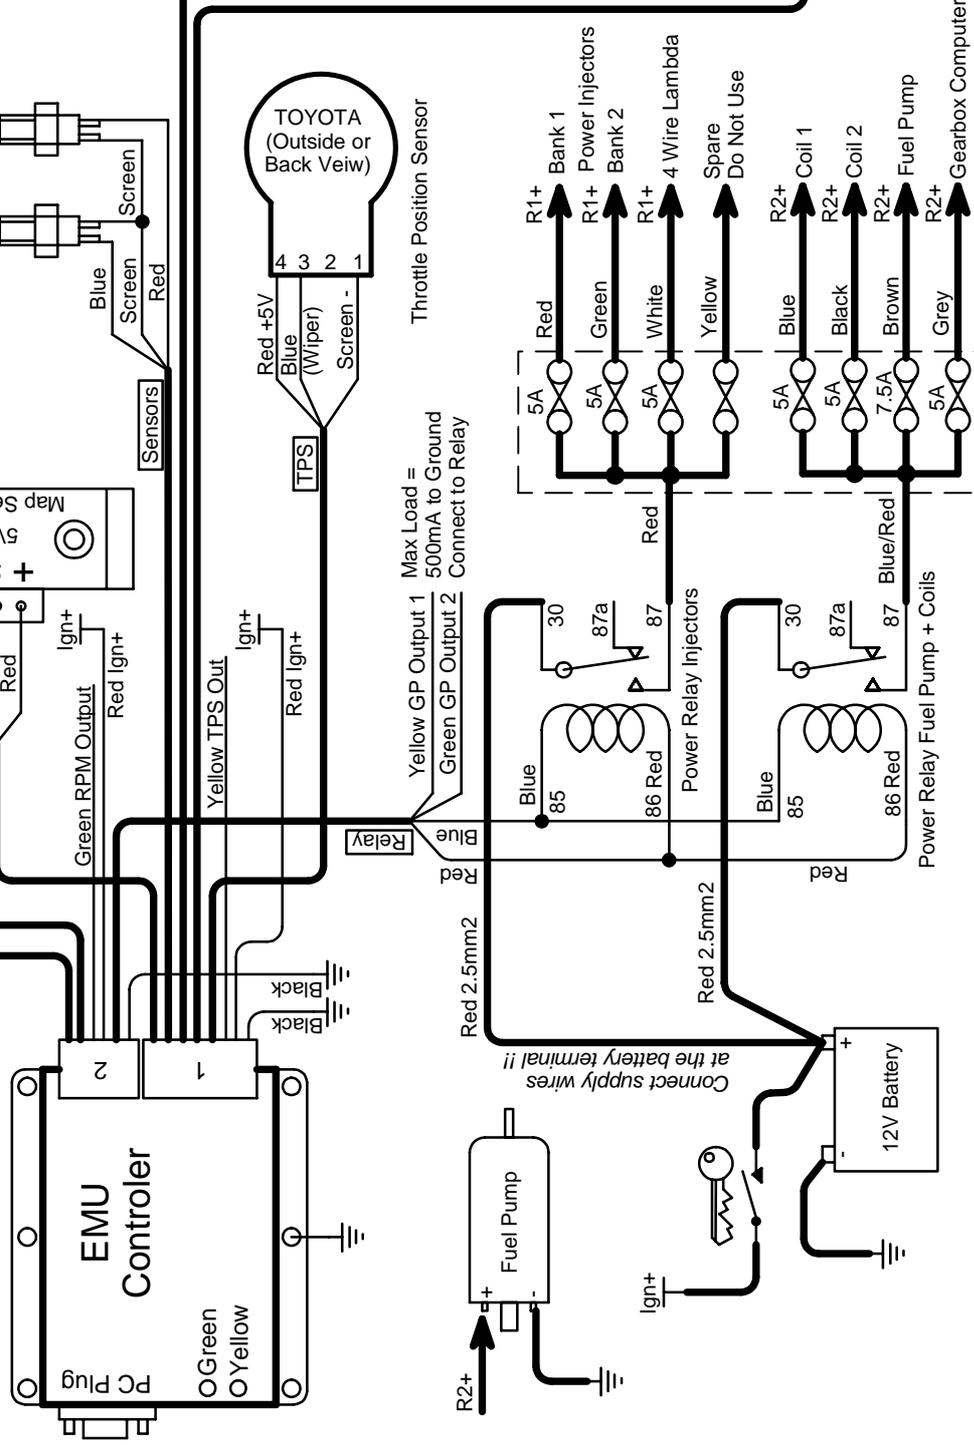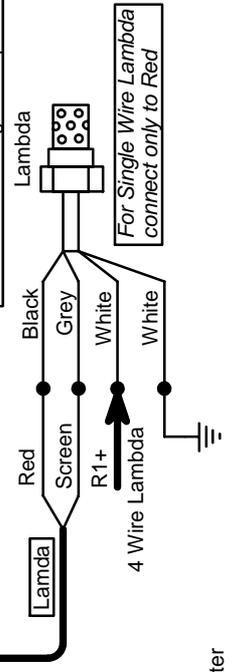

Connect supply wires at the battery terminal !!

Max Load = 500mA to Ground  
 Connect to Relay

