

Operating Instructions – Remote Buttons

Selecting between Drive and Drive Economy mode.

The driver may select between *Drive* and *Drive Economy* mode by pressing the **LOCK** button once. The green LED will toggle on or off indicating which mode is activated. The Function LED is On for *Drive* mode and Off for *Drive Economy* mode. When the driver is at high RPM's in *Drive Economy* and press the **LOCK** button the Function LED will go on but the Automatic Gearbox Computer AGC will not shift to 3rd gear until a safe RPM level is reached.

Selecting Tiptronic Mode.

To go in *Tiptronic* mode, press the **UNLOCK** button once. The AGC will go to *Tiptronic* mode and freeze in the current gear. No gearshift will take place. The green LED will flash indicating *Tiptronic* mode. It may be in *Tiptronic Manual* or *Tiptronic Auto* depending on the *Tiptronic Auto Selection* bit under programming. To shift gears the driver may press the **LOCK** button for up-shift, or **UNLOCK** button for down-shift once, for each gear shift. Keep in mind that a 3 second time limit between selections is enforced to give the gearbox time to do the manual shift action. There is also a rev limit placed on shifts to protect the gearbox from over revving. This means that if the engine RPM are too high, the AGC will not allow a lower gear to be shifted. The same goes for up-shift. If RPM's are too low, higher gears will not be shifted.

Selecting Automatic Mode.

To go back to *Automatic* mode, press the **LOCK** button twice with a half second interval. The LED will stop flashing and go to the same state as it was in *Automatic* mode. This means that Tiptronic will not affect the state of the *Automatic* mode. If it was in *Drive Economy* it will go back to *Drive Economy* mode.

Selecting Automatic Towing Mode.

This mode will always start in de-activated mode when the AGC is switched on. To go to *Automatic Towing* mode, press the **LOCK** button twice with a half second interval. The Function LED will flash once and *Towing* mode is activated. To de-activate *Towing* mode while driving, press the **LOCK** button twice with a half second interval. The LED will flash twice and *Towing* mode is de-activated. It will also be de-activated when the car is switched off. If the Function LED is on in *Drive* mode, it will flash *off* once or twice. If the LED is off in *Drive Economy* mode it will flash *on* once or twice.

For setting up the AGC please refer to the installation manual.

Note! *The Gearbox computer must be upgraded to LG3.3R for correct operation.*

