

# 2Trig 6Cyl 1Coil 5V Mag

Harness Required: E11 Ver 1.0 & E13 Ver 1.0


Last Changed: 15/07/2008

Drawing Ver: 1.0


Ign+ Ignition Power  
Earth

**Terminal Connections with the same name are tied together**


**Led's Functions**  
Yellow - Power  
Green - RPM Pulse

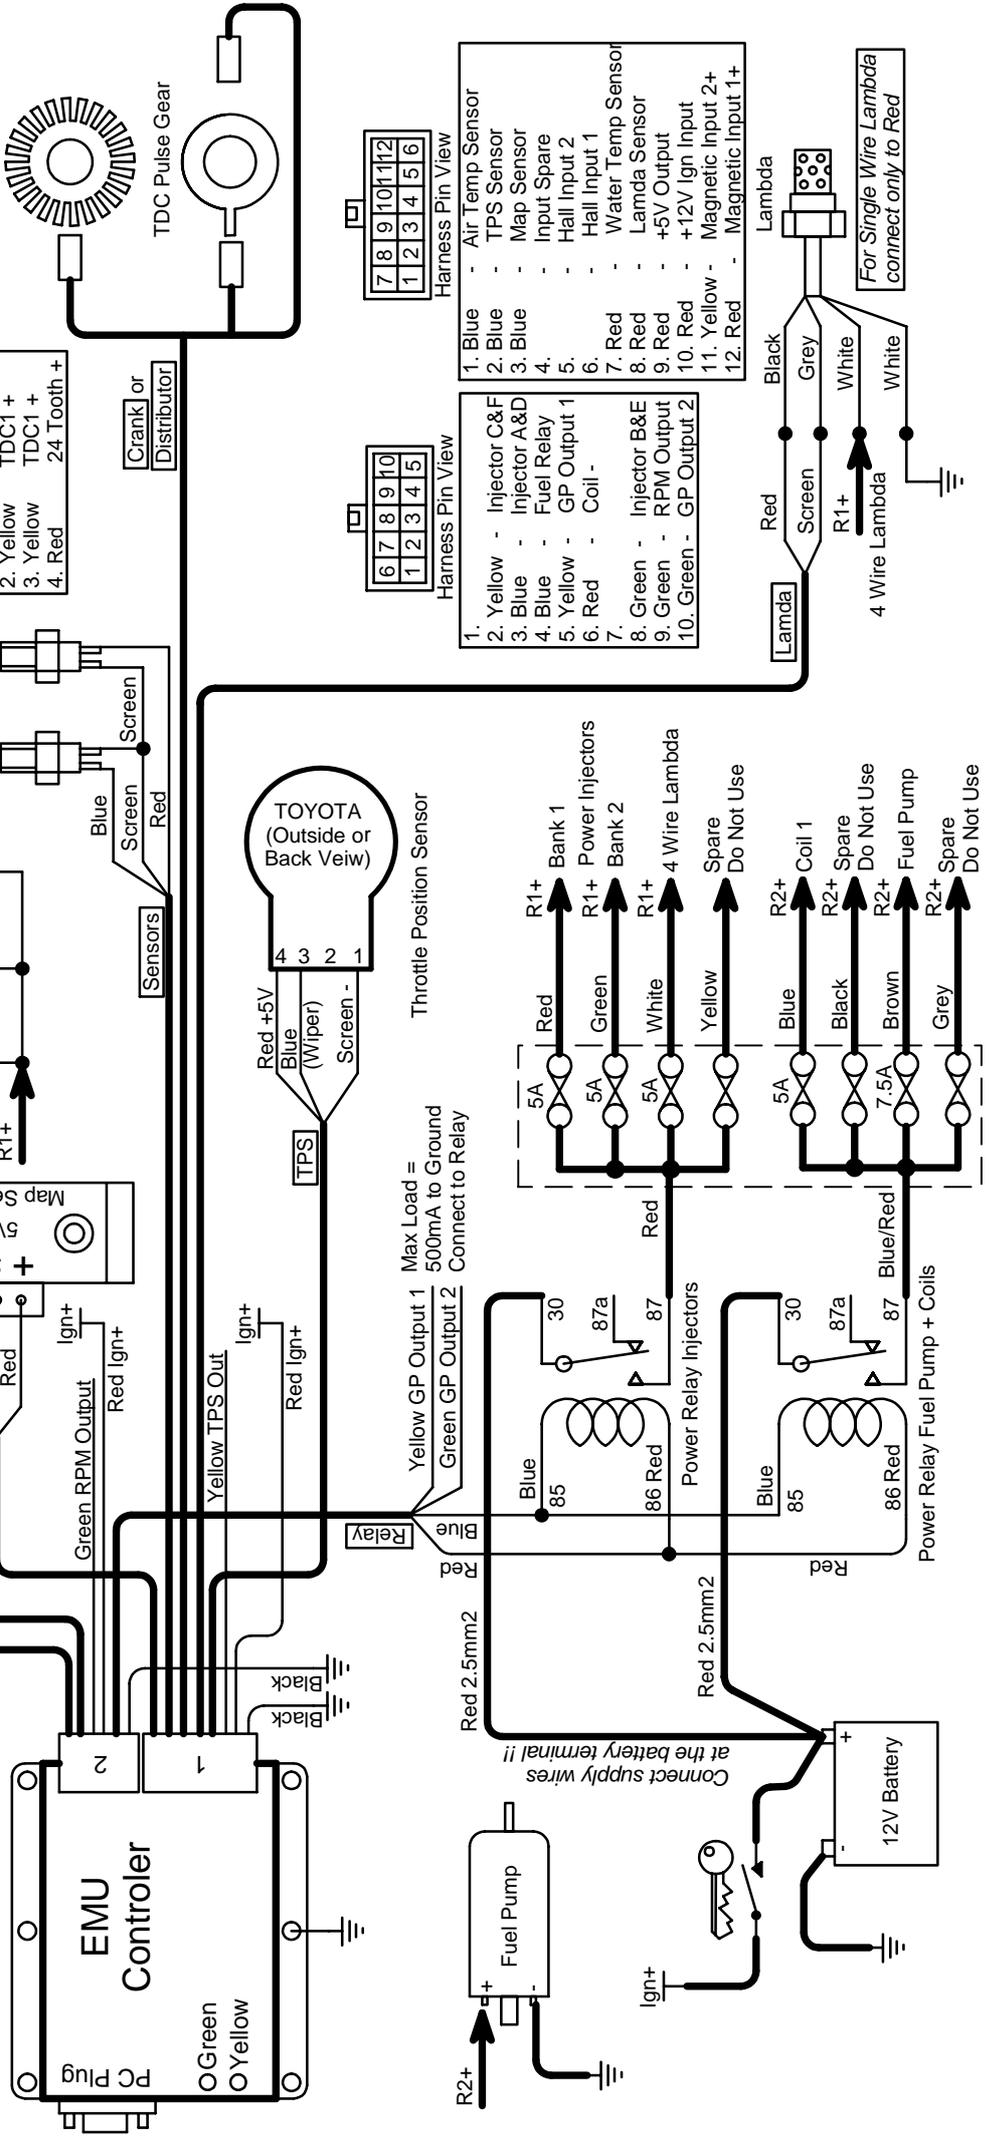

Harness	Distributor	Description
1. Red	Red	24 Tooth +
2. Yellow	Green & Yellow	2 x TDC +
3. Blue	White x 3	3 x Induct. -

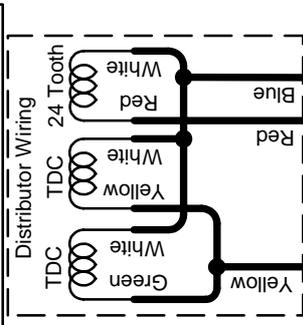

Harness	Description
1. Blue	Common
2. Yellow	TDC1 +
3. Yellow	TDC1 +
4. Red	24 Tooth +

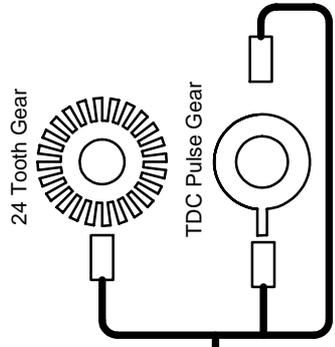


Harness Pin View
7 8 9 10 11 12
1 2 3 4 5 6

1. Blue	- Air Temp Sensor
2. Blue	- TPS Sensor
3. Blue	- Map Sensor
4. -	- Input Spare
5. -	- Hall Input 2
6. -	- Hall Input 1
7. Red	- Water Temp Sensor
8. Red	- Lambda Sensor
9. Red	- +5V Output
10. Red	- +12V Ign Input
11. Yellow	- Magnetic Input 2+
12. Red	- Magnetic Input 1+

Harness Pin View
6 7 8 9 10
1 2 3 4 5

1. Yellow	- Injector C&F
2. Blue	- Injector A&D
4. Blue	- Fuel Relay
5. Yellow	- GP Output 1
6. Red	- Coil -
8. Green	- Injector B&E
9. Green	- RPM Output
10. Green	- GP Output 2

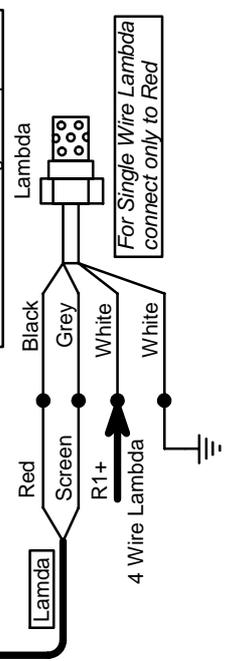

TOYOTA (Outside or Back View)

Max Load = 500mA to Ground  
Connect to Relay

