

Mitsubishi Firing Modules for 6Cyl

Last Changed: 27/01/2010

Drawing Ver: 1.0

Note!
EMU must be set for External Drivers
Coils must be wired through external fuses from the EMU Fuse box (7.5A per 2 Coils)
See firing order in the manual

