Coil Driver Trigger Level E21 4Cyl 4Coil Ext Drv on External Coil Driver before connecting the 10Way conector Coil 4 Coil 2 Coil 3 Coil 1 Last Changed: 14/11/2012 Drawing Ver: 1.0 + Trigger 펍II: R2+ Ignition Power 2<u>20R</u> 5W Earth **Terminal Connections** Blue with the same name are tied together Red Green RPM Output Led's Functions Yellow - Power Green - RPM Pulse 0 0 Firing Order 1342 PC Plug Red **ECU** Drivers  $^{\circ}$ 日 O Green **OYellow** Black White Use 2.5mm or lager wire if enclosure is not earthed to body Connect to enclosure Max Load = Yellow GP Output 1 2A to Ground or Green GP Output 2 Red Connect to Relay Red 2.5mm2 Fuel Pump Connector Pinouts Blue Connect supply wires at the battery terminal 87a MTA Fuse Box Harness Pin View 86 Red 87 Red Brown Bank 1 1. Blue - Coil 2 Power Relay Injectors 2. Green - Coil 3 R1+ Power Injectors Red 2.5mm2 Brown 3. White - Inj 1 4. Blue - Fuel Relay 5. Yellow - GP Output 1 R1+ Blue R2+ Red 6. Red - Coil 1 30 85 Bank 1 7. Yellow - Coil 4 R2+ Power Coils 87a 8. Black - Inj 2 Bank 2 9. Green - RPM Output 7.5A R2+ 10. Green - GP Output 2 12V Battery 86 Red Red | Yellow Fuel Pump Power Relay Fuel Pump + Coils R2+ Green Lambda

Note! Remember to put