



Dual Idle Valve with Spring Return

Last Changed: 13/11/2018


Negative Drivers from ECU

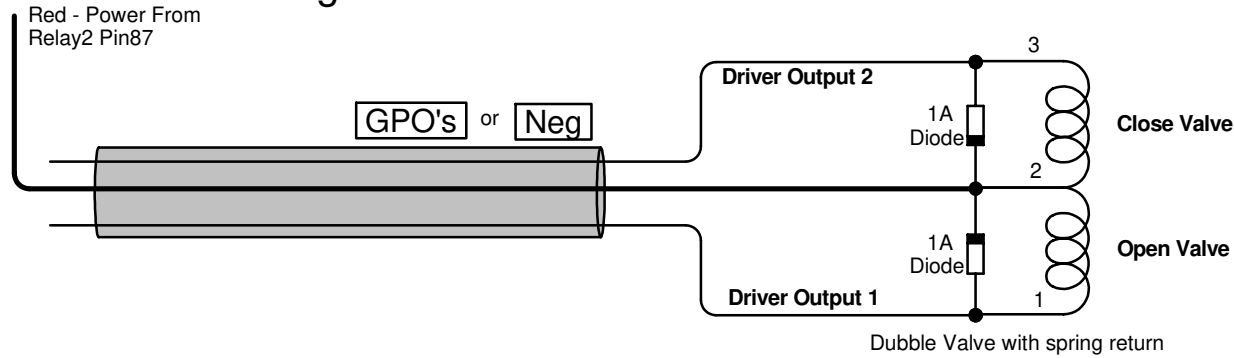

Positive Drivers from ECU

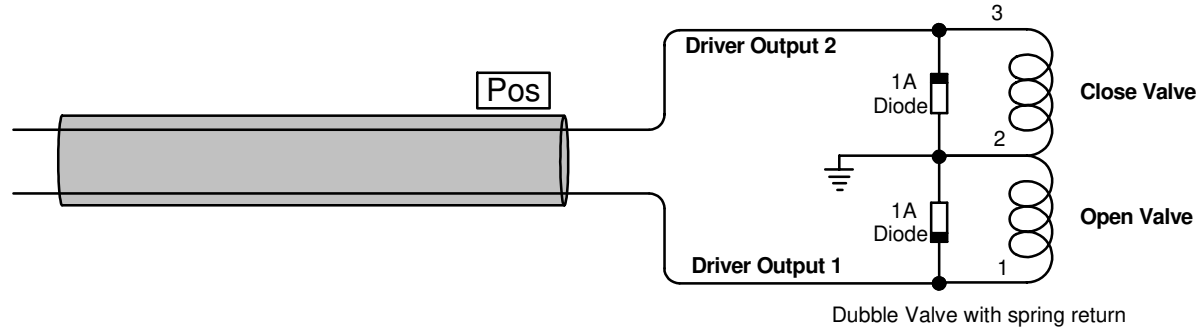

Idle Motor Toyota

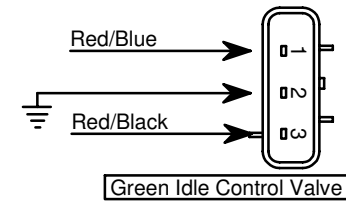

NB!! The Diode must be connected. Make sure the stripe on the diode is facing the positive.

Note: The connection to the ECU changes with the GP Output Priority selection. View the Priority spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver. Note the Blue wire on the stepper controller is connected differently for the 2 types of connections.

Software Settings

Idle Control Type

Dual Idle Valve