



Dual Idle Valve

Last Changed: 11/11/2017


NB!! The Diode must be connected. Make sure the stripe on the diode is facing the positive.

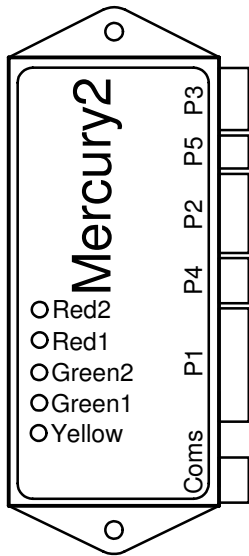

Negative Drivers from ECU

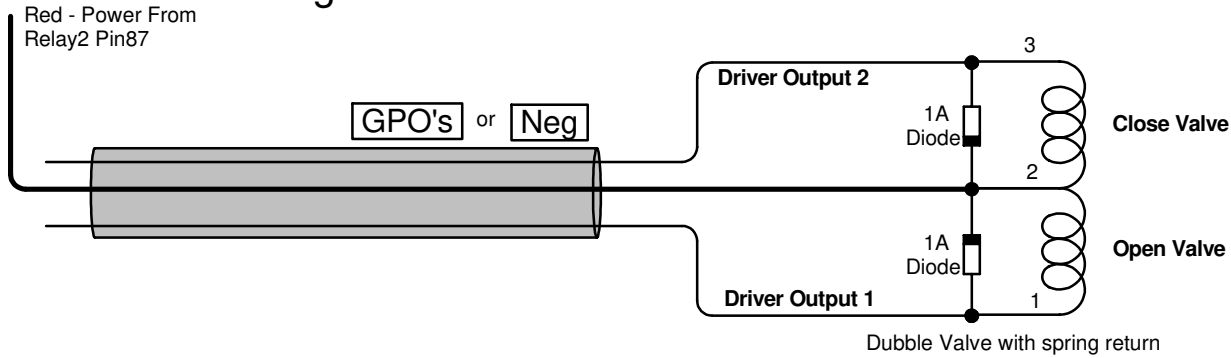

Positive Drivers from ECU

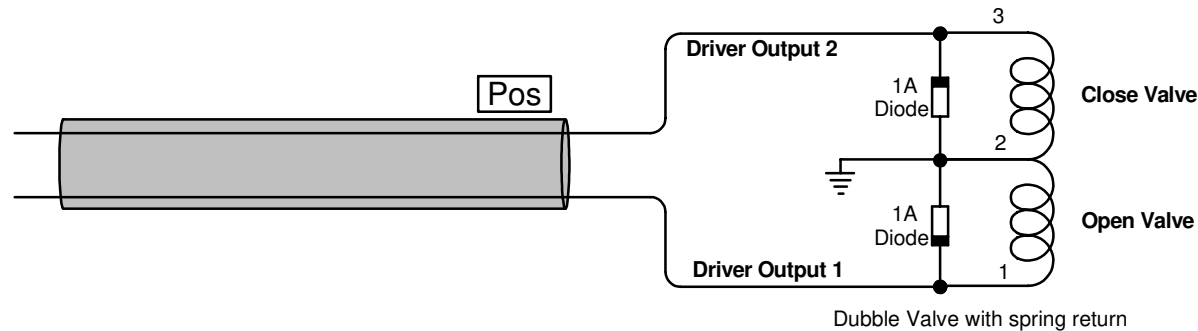

Note: The connection to the Mercury ECU changes with the GP Output Priority selection, View the Priority spreadsheet for the specific firmware to see which output is selected. Then make sure on how to connect between the 2 options above. It could be connected on a negative or positive driver.

Software Settings

Idle Control Type

Dual Idle Valve