
Cyl Basic Coils

Last Changed: 08/08/2020 Harness Required: E33



Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below. Now connect your coil number to the corresponding colour wire.

Note: The order of the coils will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two spark plugs in two pairs are driven by one coil. Make sure the HT leads are paired correctly as the alphabetical

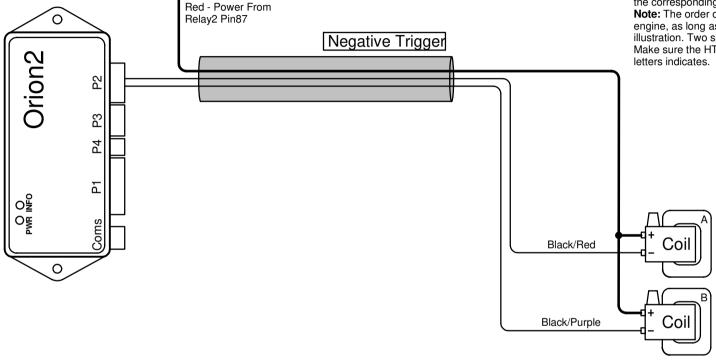

P2 1 2 3 4 5 Harness Pin View 1. Black/Purple - Coil Negative 2 2. Black/Orange -3. Black/White -4. Blue 5. Blue/Orange -6. Black/Red - Coil Negative 1 7. Black/Brown -8. Black/Yellow -9. Green 10. Blue/White -

Connector Pinouts

Software Settings

Coil Driver Trigger Combination 🚹		
Basic Coil – Use Coil Negative Drivers		
Coil Driver Outputs		
Coil Driver Output 1	Coil Negative 1	
Coil Driver Output 2	Coil Negative 2	