


8Cyl W/S Basic Coils

Last Changed: 08/08/2020
Harness Required: E33

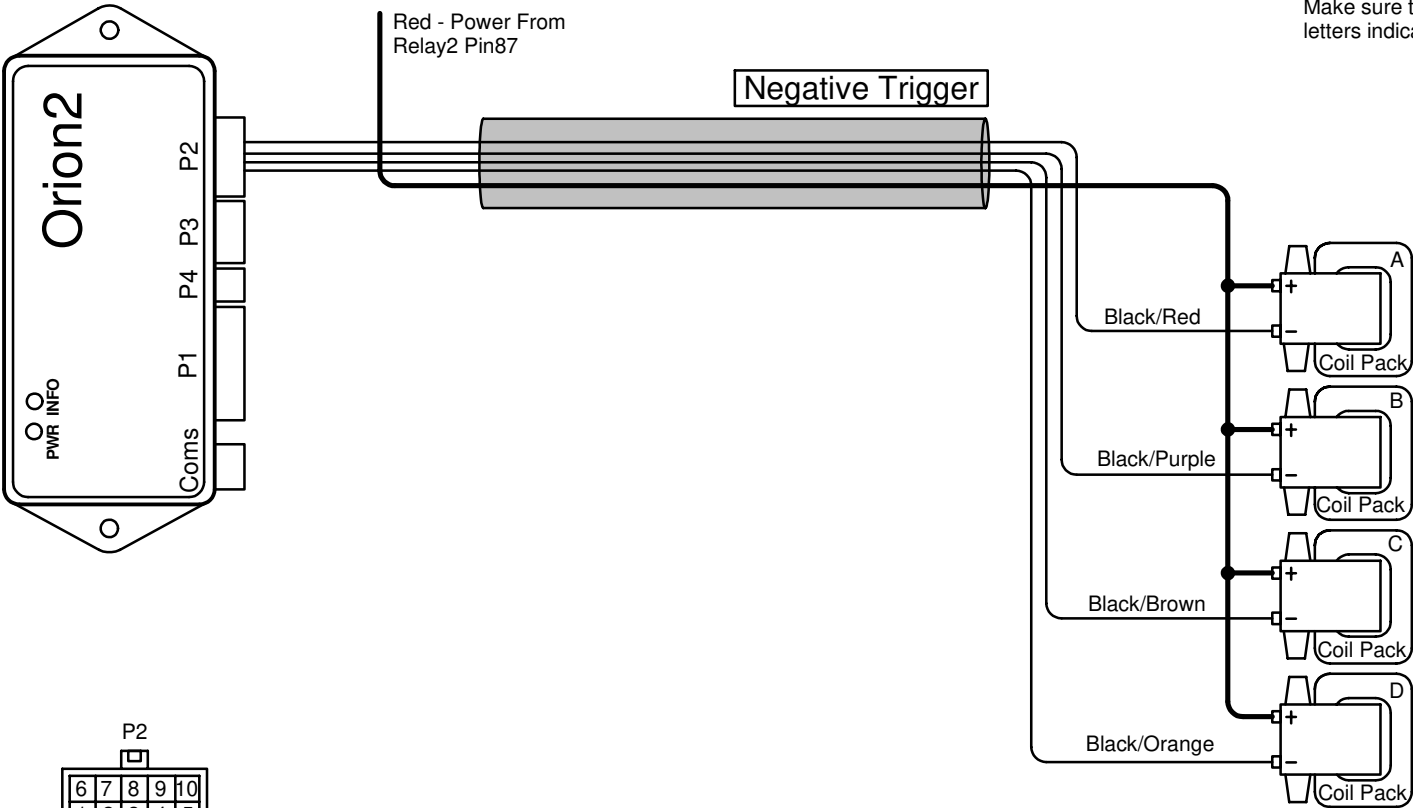

P2

6	7	8	9	10
1	2	3	4	5

Harness Pin View

1. Black/Purple	- Coil Negative 2
2. Black/Orange	- Coil Negative 4
3. Black/White	-
4. Blue	-
5. Blue/Orange	-
6. Black/Red	- Coil Negative 1
7. Black/Brown	- Coil Negative 3
8. Black/Yellow	-
9. Green	-
10. Blue/White	-

Connector Pinouts

A	B	C	D	A	B	C	D
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding coil with the same alphabetical letter in the drawing below. Now connect your coil number to the corresponding colour wire.

Note: The order of the coils will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two spark plugs in four pairs are driven by one coil. Make sure the HT leads are paired correctly as the alphabetical letters indicates.

Software Settings

Coil Combination ⚠

Wasted Spark Coil Pack

Coil Driver Trigger Combination ⚠

Basic Coil – Use Coil Negative Drivers

Coil Driver Outputs

Coil Driver Output 1	Coil Negative 1
Coil Driver Output 2	Coil Negative 2
Coil Driver Output 3	Coil Negative 3
Coil Driver Output 4	Coil Negative 4