


Toyota Black Idle Valve

Last Changed: 13/11/2018

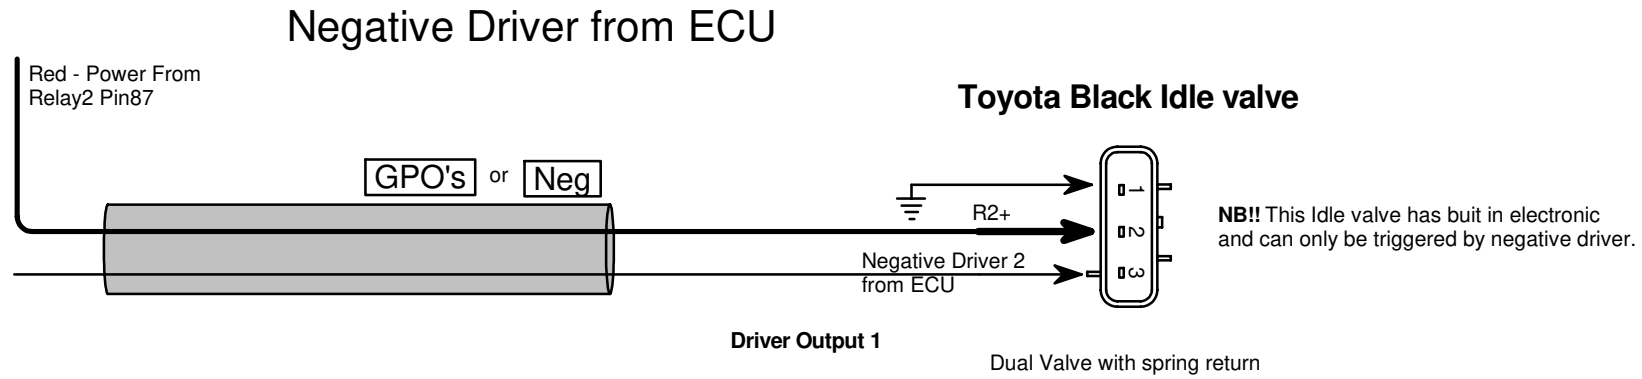

Note: The connection to the ECU changes with the GP Output Priority selection. View the Priority spreadsheet for the specific firmware to see which output is selected. It must be a negative driver as the idle electronics has a buit in pull-up resistor.

Software Settings

Idle Control Type

Idle Valve