


2Rotor W/S COP Basic Coils

Last Changed: 08/06/2021
 Harness Required: E33

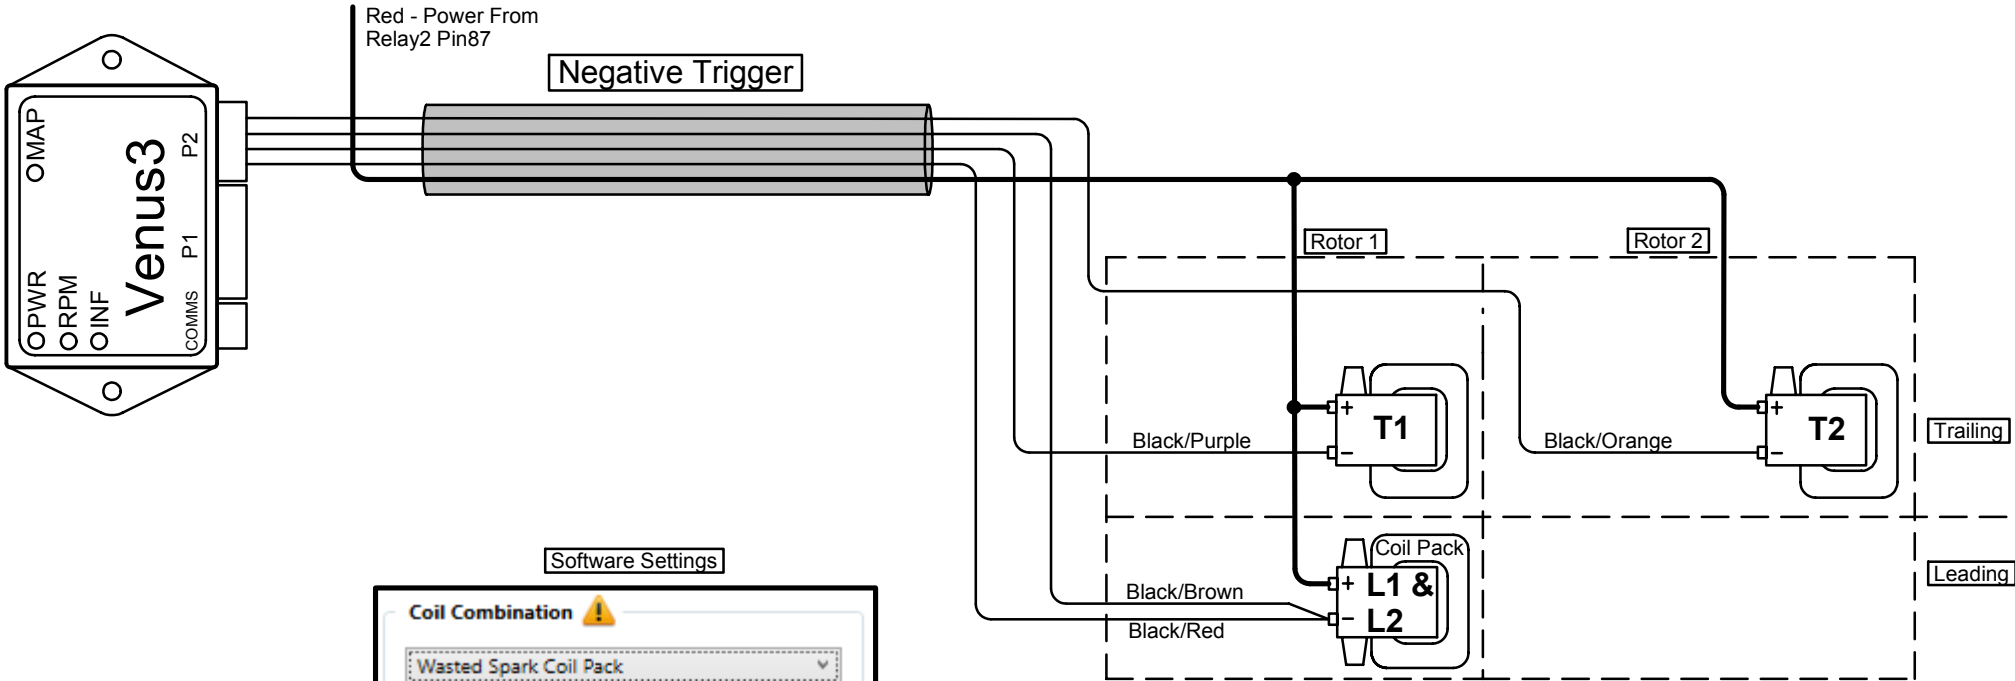

Software Settings

Coil Combination ⚠

Wasted Spark Coil Pack

Coil Driver Trigger Combination ⚠

Basic Coil - Use Coil Negative Drivers

Coil Driver Outputs

 
Coil Driver Output 1 **Coil Negative 1**

Coil Driver Output 2 **Coil Negative 2**

Coil Driver Output 3 **Coil Negative 3**

Coil Driver Output 4 **Coil Negative 4**

Note: The 2 leading coil drivers are tied together on the wasted spark leading coil pack. Software must be set to wasted spark. The trailing coils cannot be shared with a coil pack.



Harness Pin View

- 1. Black/Purple - Coil T1
- 2. Black/Orange - Coil T2
- 3. Black/White -
- 4. Blue -
- 5. Blue/Orange -
- 6. Black/Red - Coil L1
- 7. Black/Brown - Coil L1
- 8. Black/Yellow -
- 9. Green -
- 10. Blue/White -

Connector Pinouts