


Orion ECU Jumper Settings

Last Changed: 05/09/2019

GP4 / Dual Map Jumper
Top jumper switch between Dual Map and GP4 -
Keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper
Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

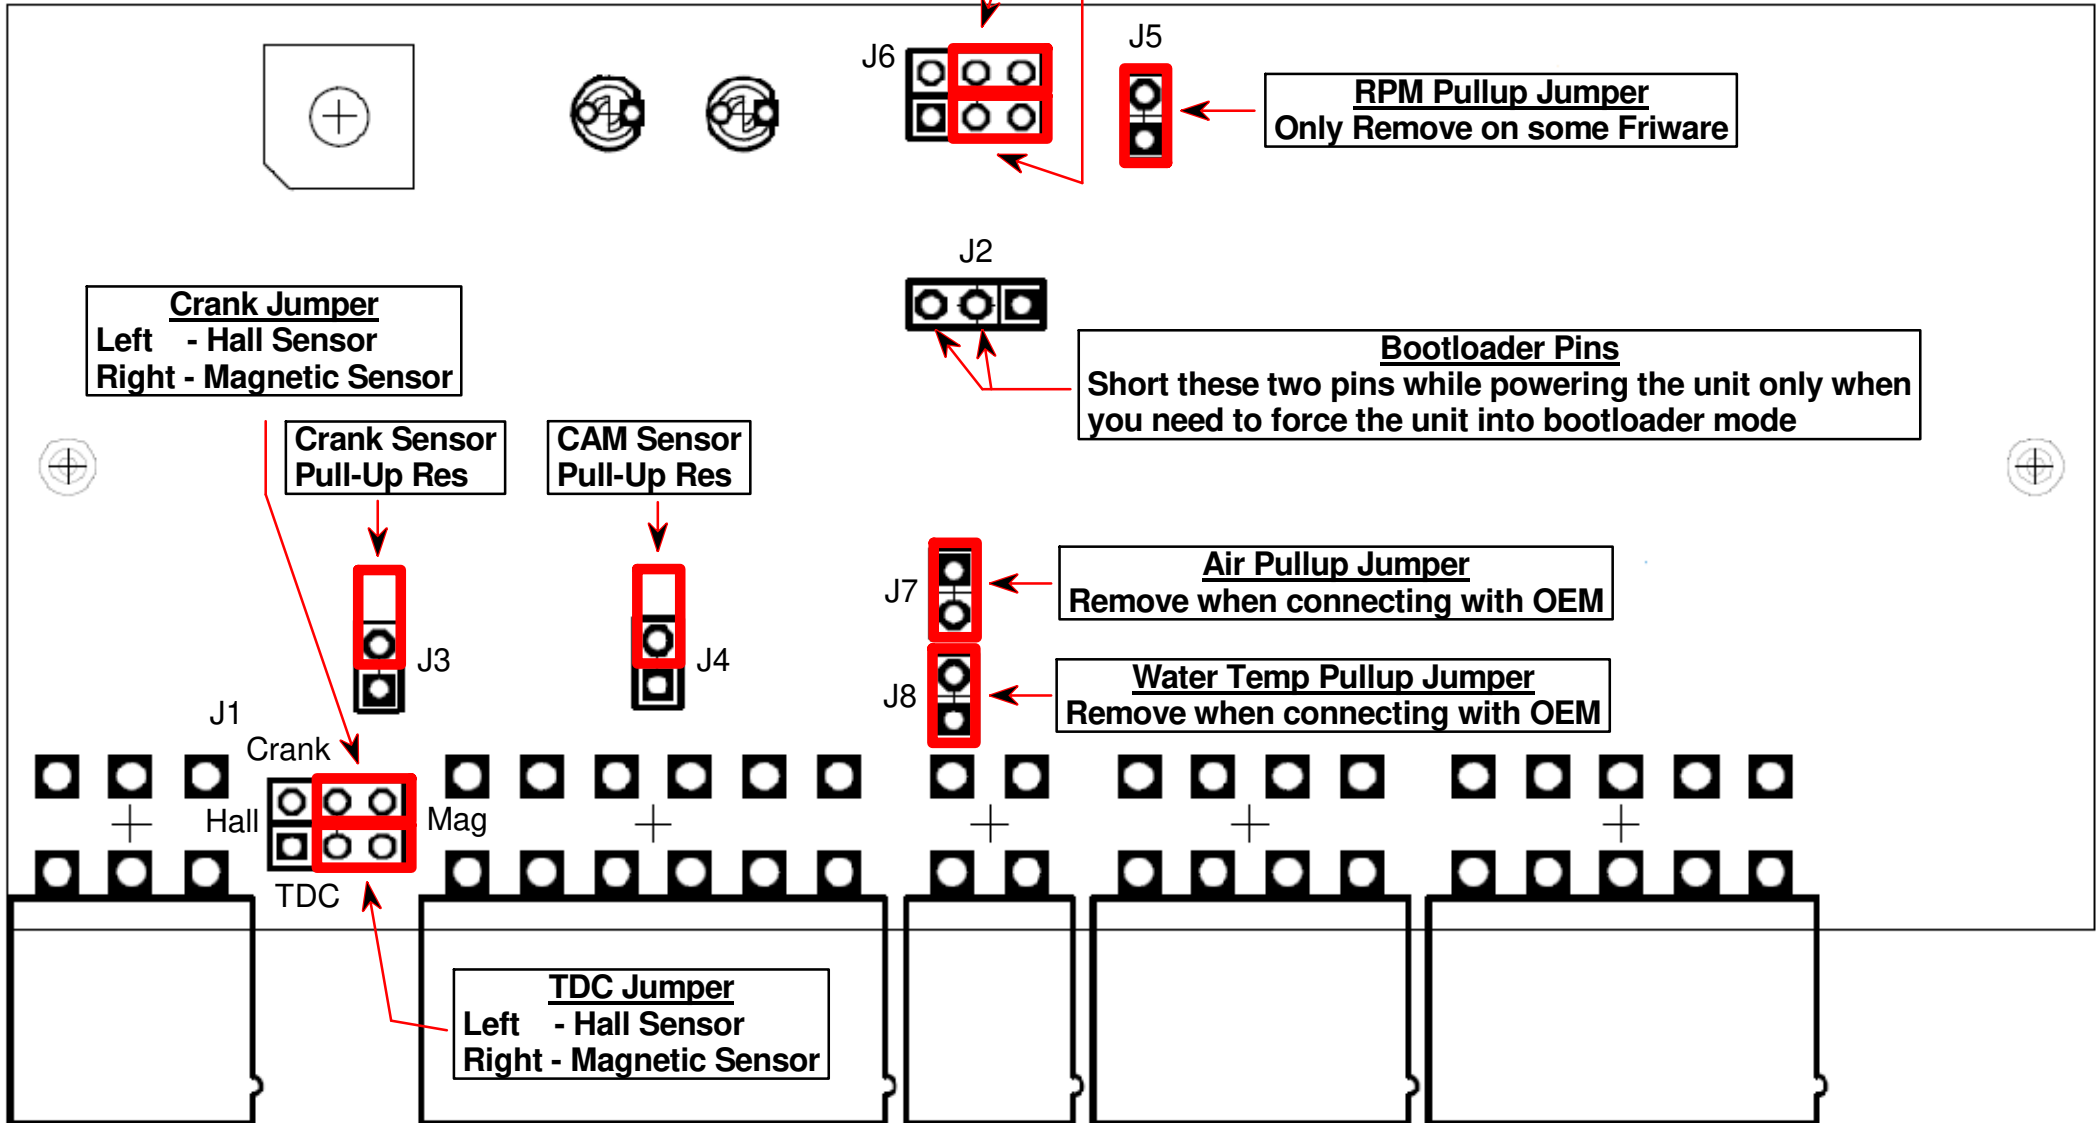


Orion ECU Jumper Settings

Last Changed: 05/09/2019

GP4 / Dual Map Jumper
Top jumper switch between Dual Map and GP4 -
Keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper
Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

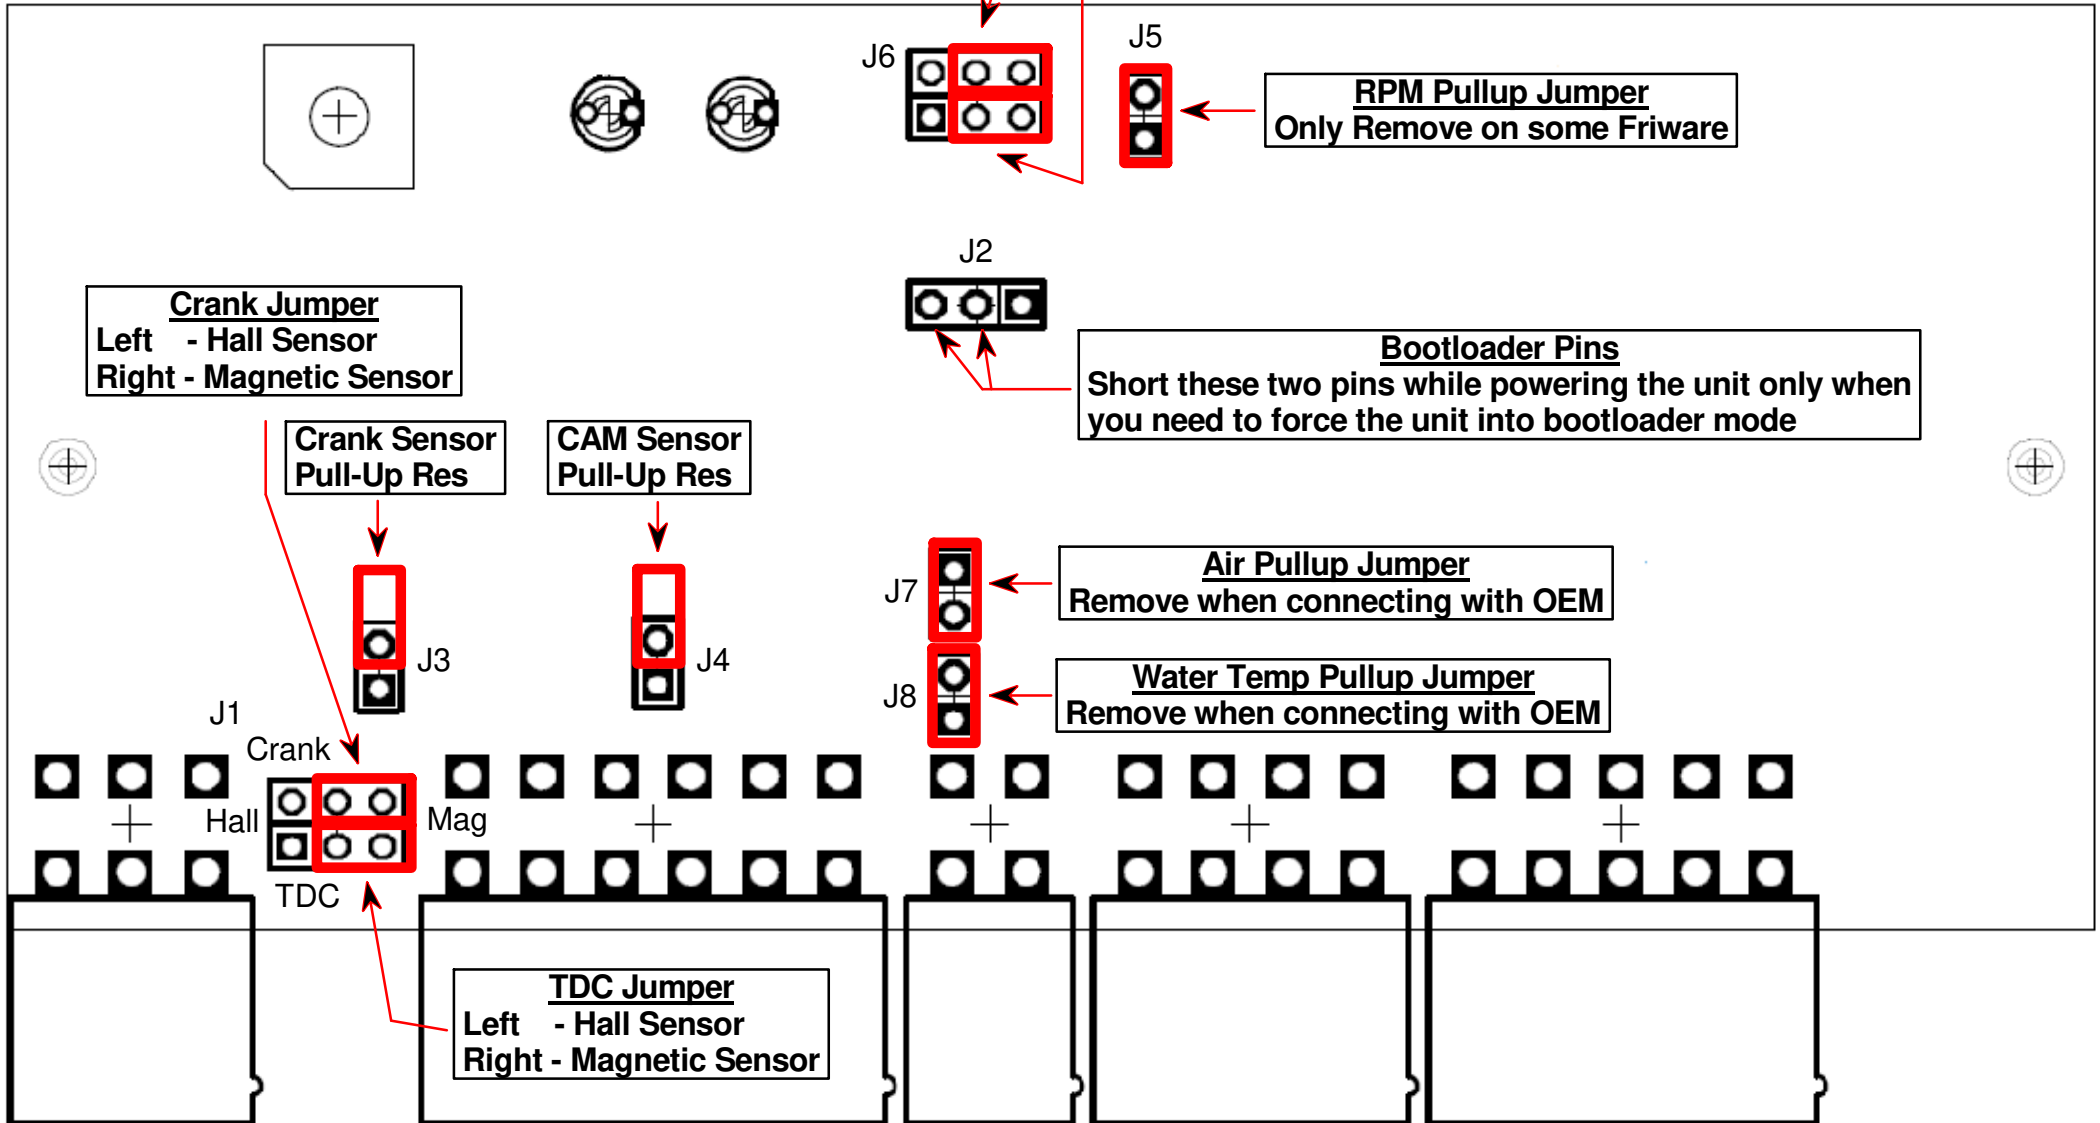


Orion ECU Jumper Settings

Last Changed: 05/09/2019

GP4 / Dual Map Jumper
Top jumper switch between Dual Map and GP4 -
Keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper
Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

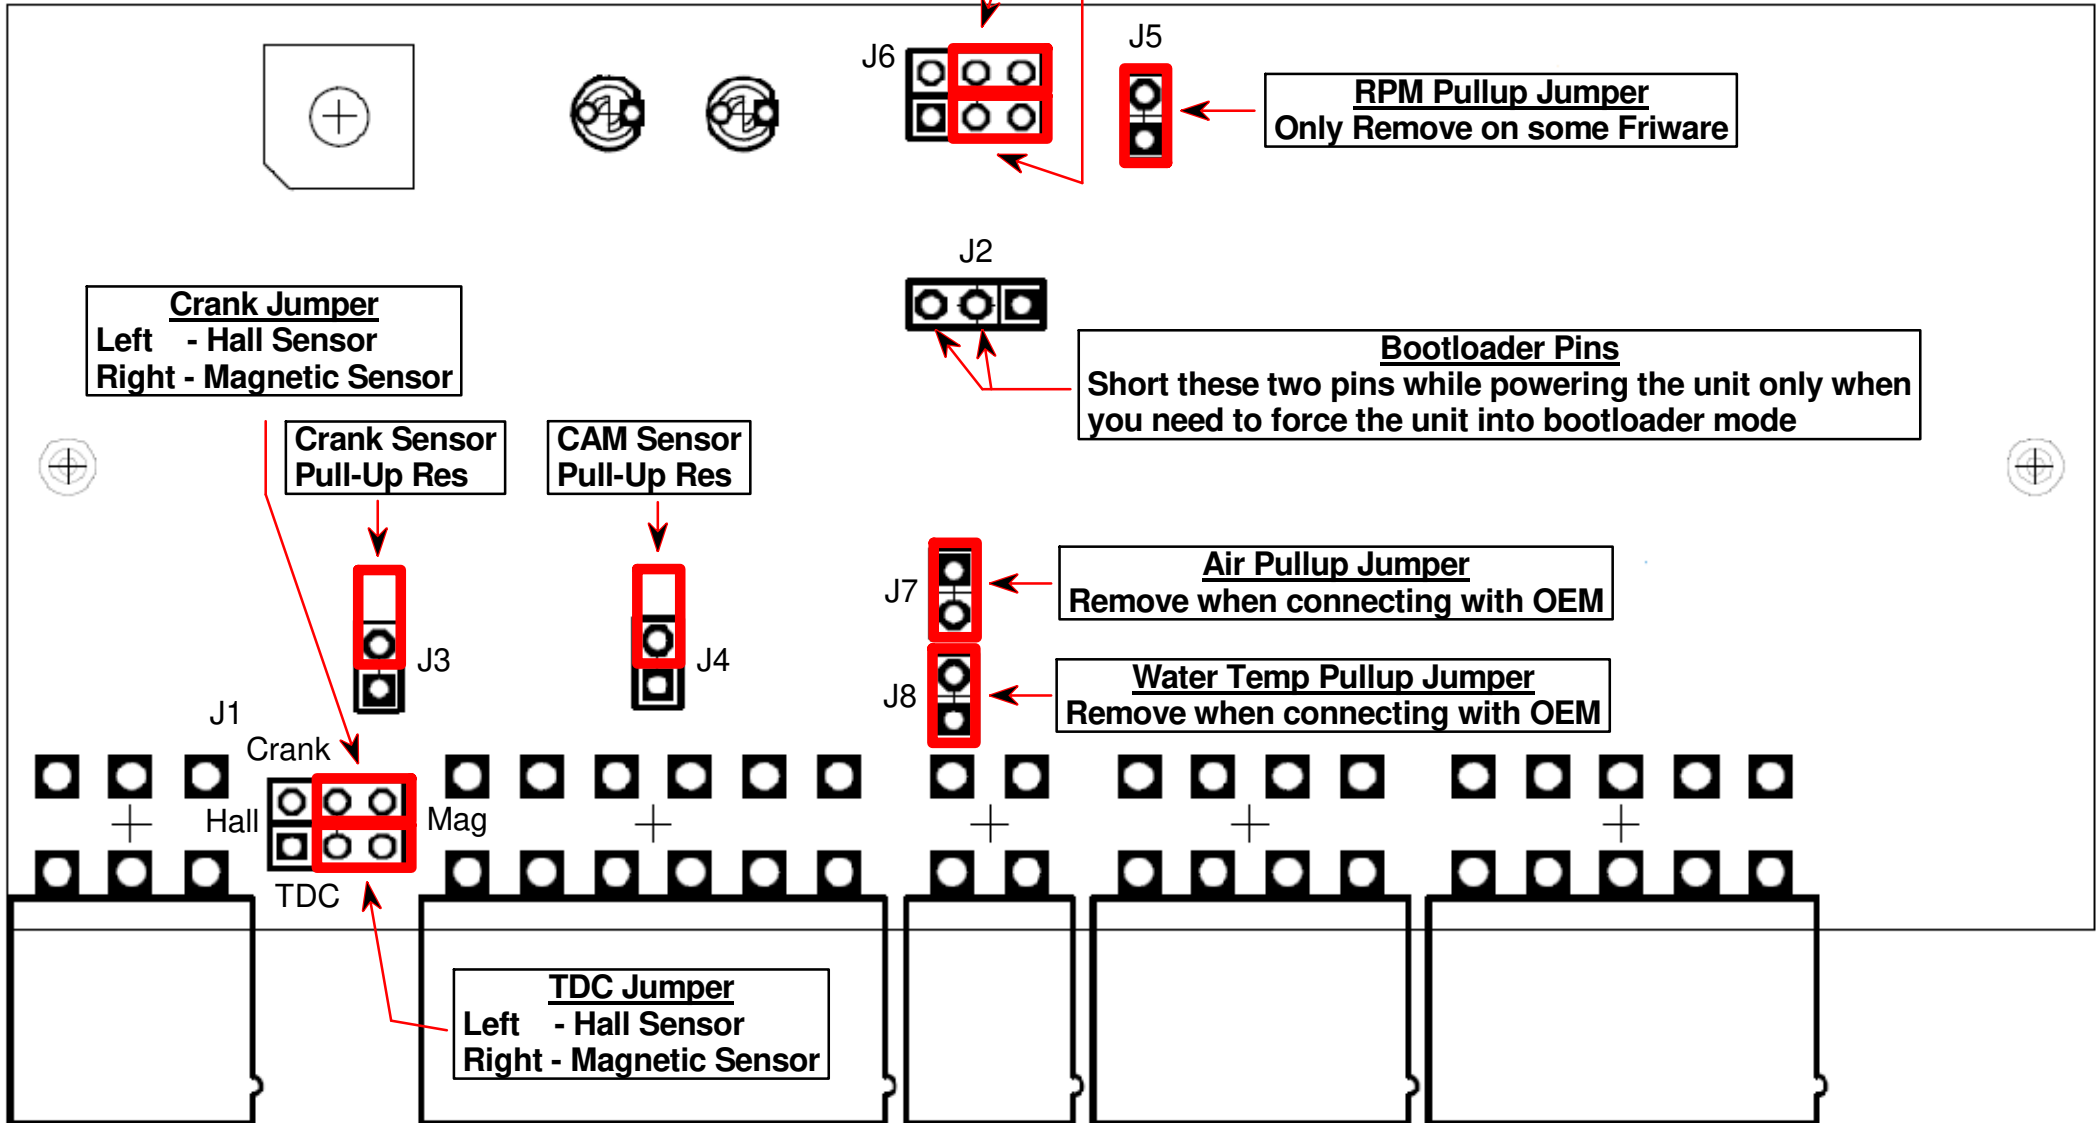


Orion ECU Jumper Settings

Last Changed: 05/09/2019

GP4 / Dual Map Jumper
Top jumper switch between Dual Map and GP4 -
Keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper
Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

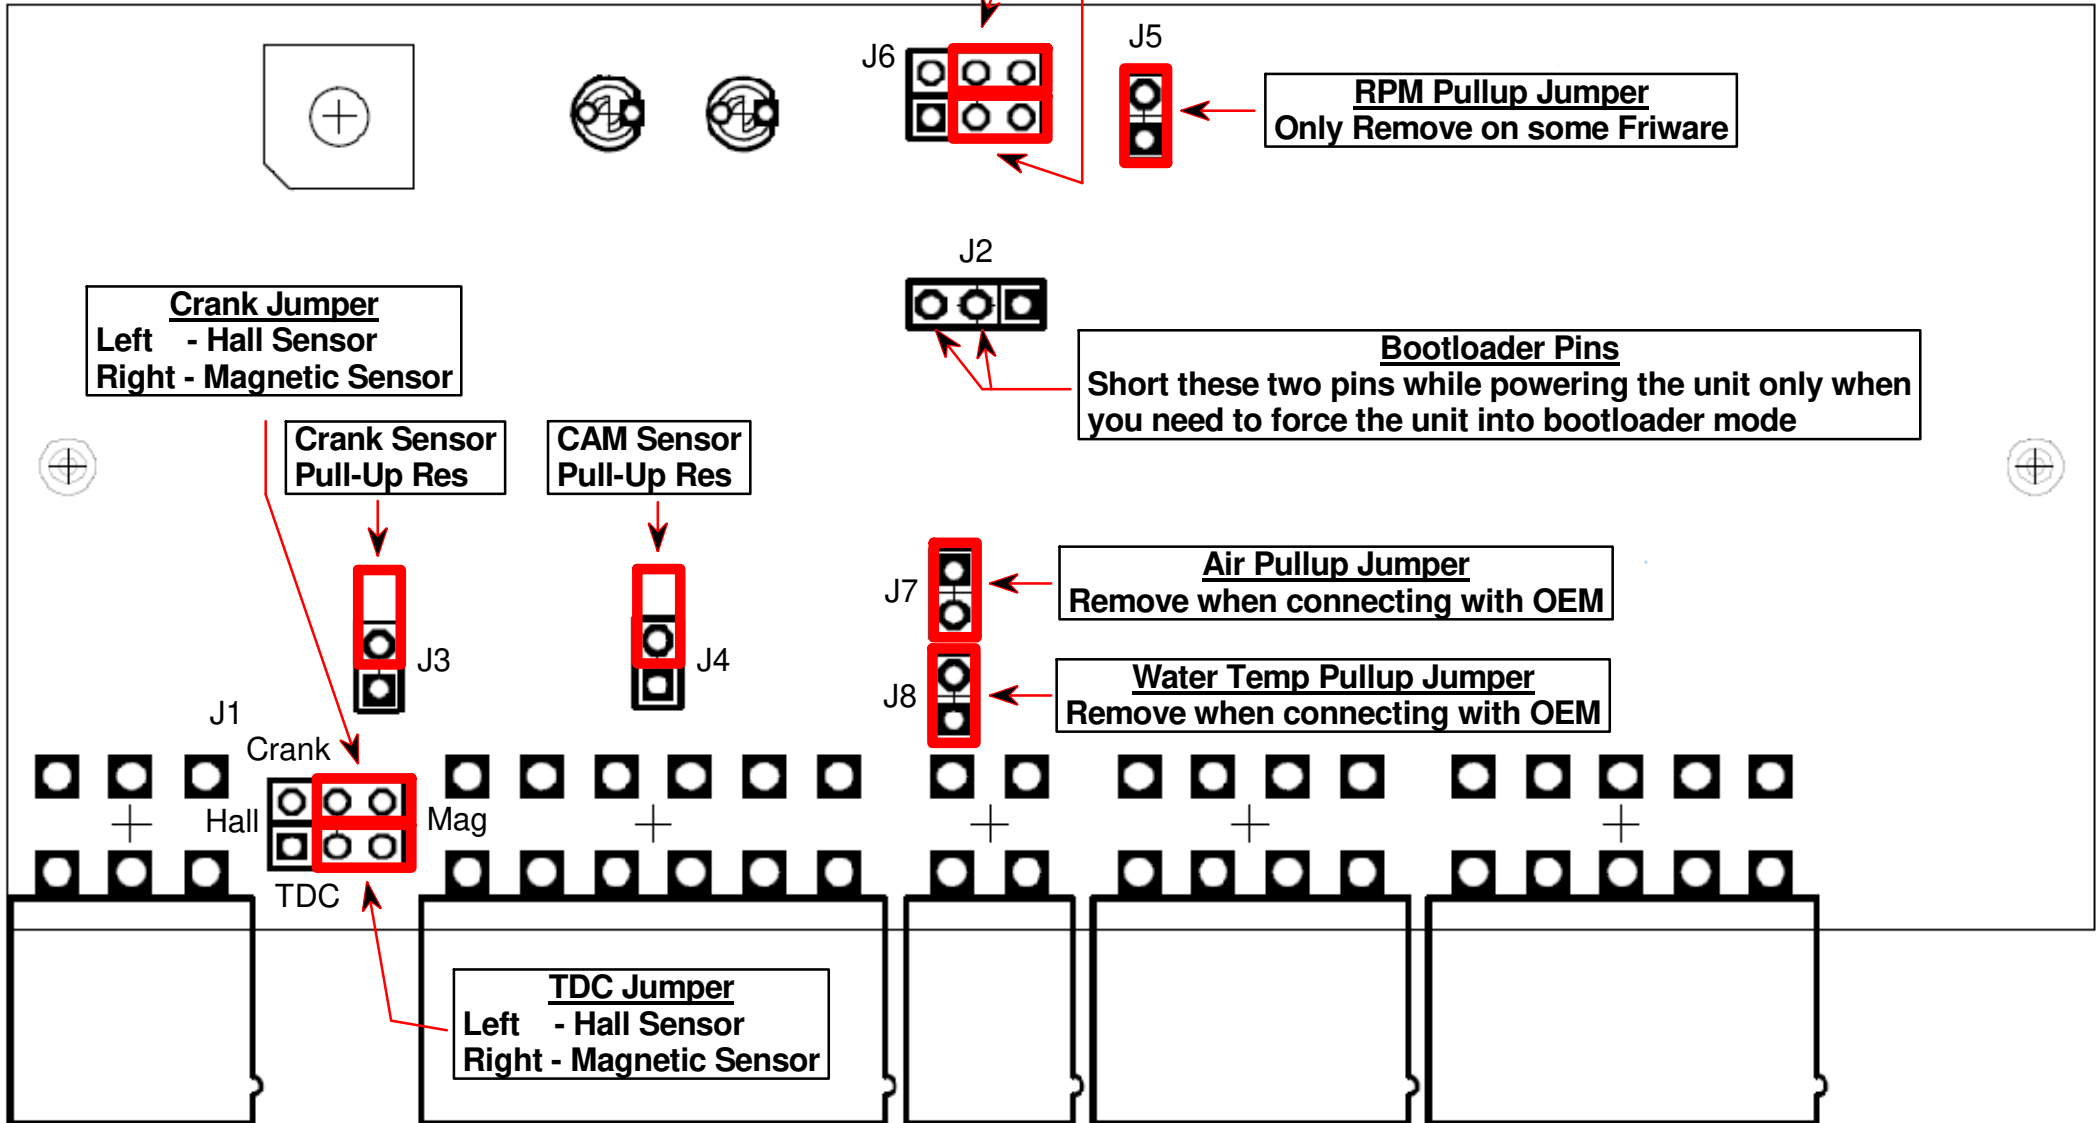

Orion ECU Jumper Settings

Last Changed: 05/09/2019

GP4 / Dual Map Jumper
Top jumper switch between Dual Map and GP4 -
Keep on GP4 (to the right) when Dual Map is not connected

GP3 / POT Jumper
Bottom jumper switch between POT Input and GP3 Output -
Keep on GP3 (to the right) when POT is not connected

