

# Orion TCU Jumper Settings

Last Changed: 05/09/2019

**GP4 / Dual Map Jumper**  
Top jumper switch between Down SW and GP4 -  
Keep on GP4 (to the right) when Down SW is not connected

**GP3 / POT Jumper**  
Bottom jumper switch between Up SW and GP3 Output -  
Keep on GP3 (to the right) when Up SW is not connected

**RPM Pullup Jumper**  
Only Remove on some Friware


**RPM Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

**Bootloader Pins**  
Short these two pins while powering the unit only when  
you need to force the unit into bootloader mode

**Oil 10K Pullup Jumper**  
Remove when connecting with OEM

**Oil 2K Pullup Jumper**  
Remove when connecting with OEM

**Speed Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

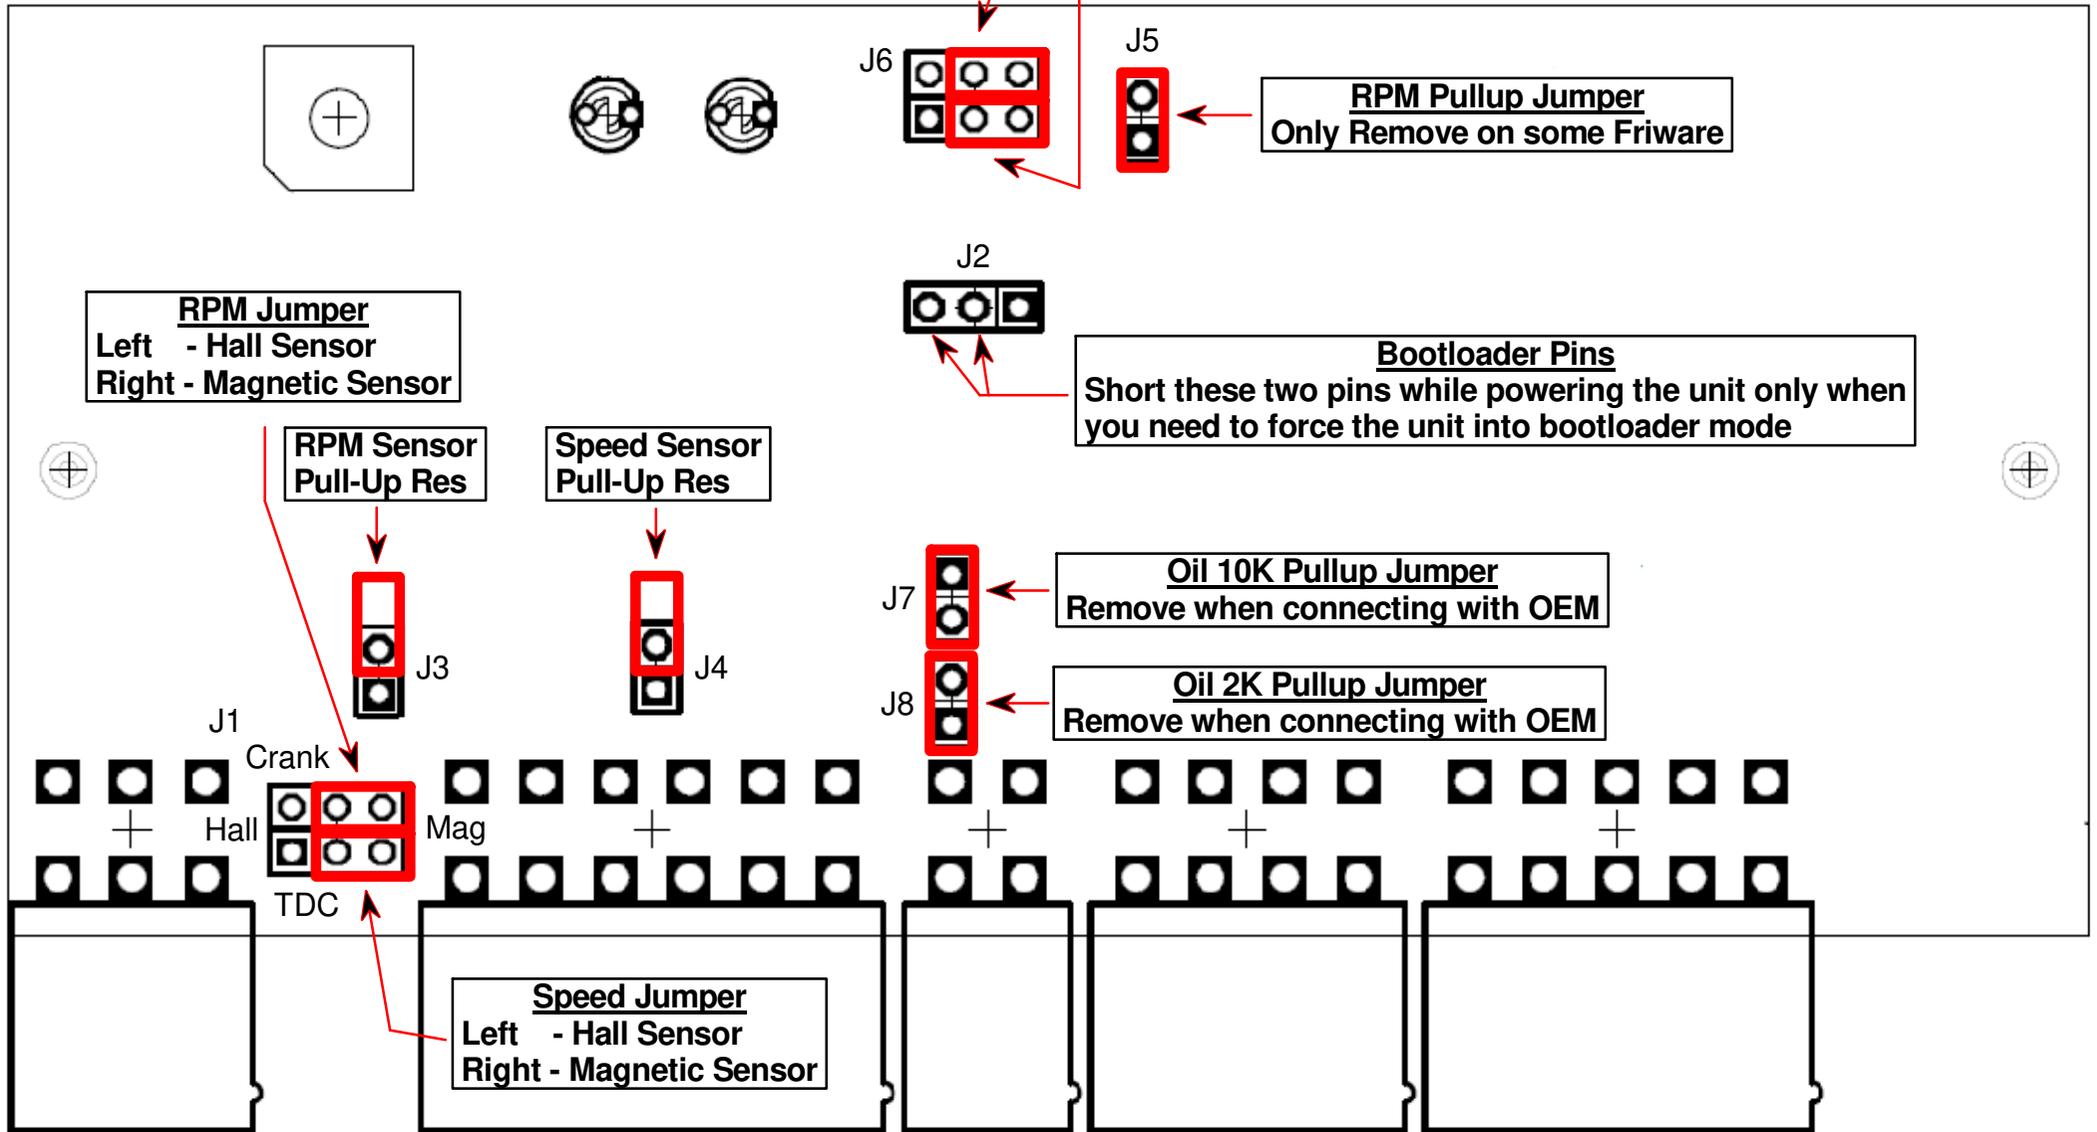

# Orion TCU Jumper Settings

Last Changed: 05/09/2019

**GP4 / Dual Map Jumper**  
Top jumper switch between Down SW and GP4 -  
Keep on GP4 (to the right) when Down SW is not connected

**GP3 / POT Jumper**  
Bottom jumper switch between Up SW and GP3 Output -  
Keep on GP3 (to the right) when Up SW is not connected

**RPM Pullup Jumper**  
Only Remove on some Friware


**RPM Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

**Bootloader Pins**  
Short these two pins while powering the unit only when  
you need to force the unit into bootloader mode

**Oil 10K Pullup Jumper**  
Remove when connecting with OEM

**Oil 2K Pullup Jumper**  
Remove when connecting with OEM

**Speed Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

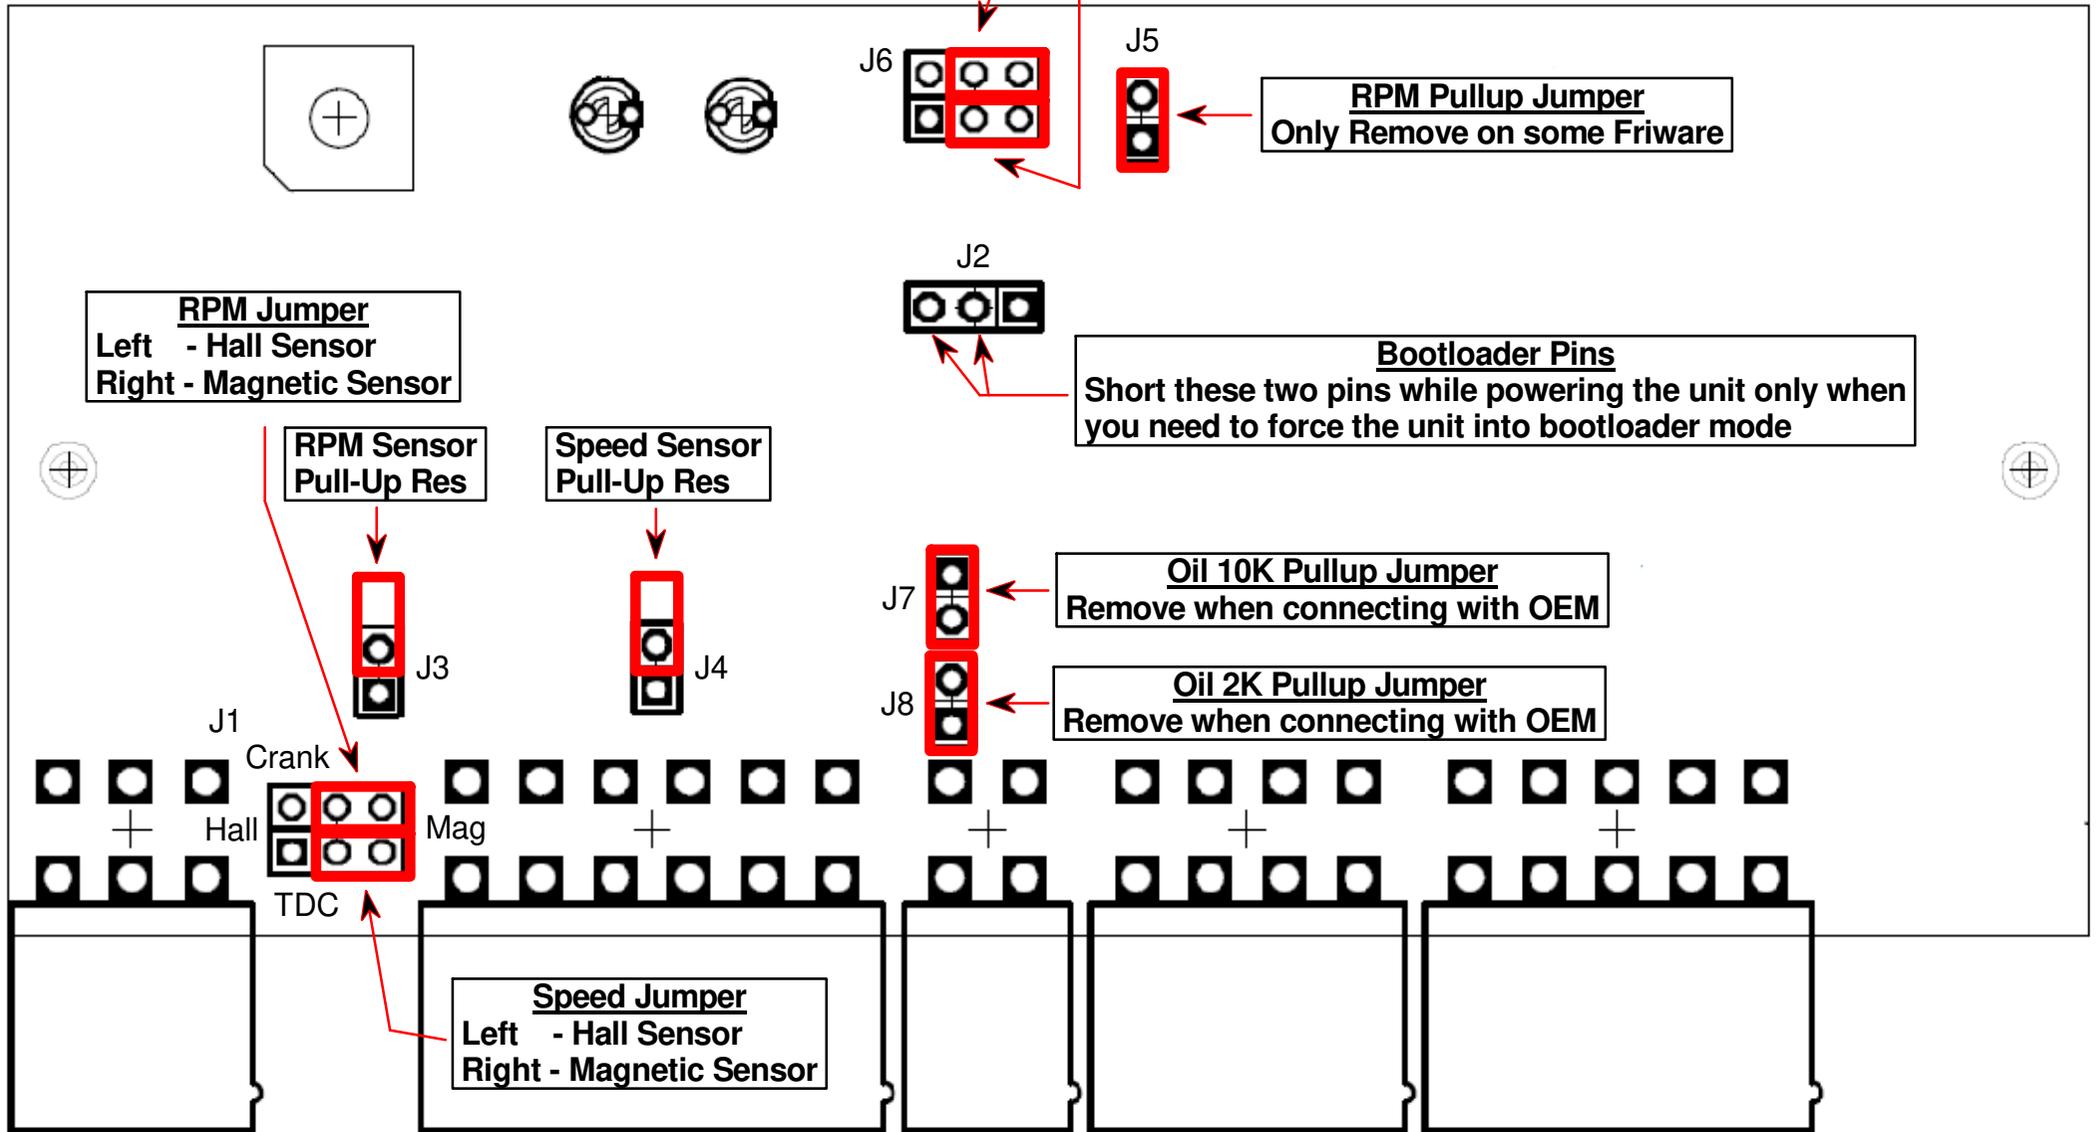

# Orion TCU Jumper Settings

Last Changed: 05/09/2019

**GP4 / Dual Map Jumper**  
Top jumper switch between Down SW and GP4 -  
Keep on GP4 (to the right) when Down SW is not connected

**GP3 / POT Jumper**  
Bottom jumper switch between Up SW and GP3 Output -  
Keep on GP3 (to the right) when Up SW is not connected

**RPM Pullup Jumper**  
Only Remove on some Friware


**RPM Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

**Bootloader Pins**  
Short these two pins while powering the unit only when  
you need to force the unit into bootloader mode

**Oil 10K Pullup Jumper**  
Remove when connecting with OEM

**Oil 2K Pullup Jumper**  
Remove when connecting with OEM

**Speed Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

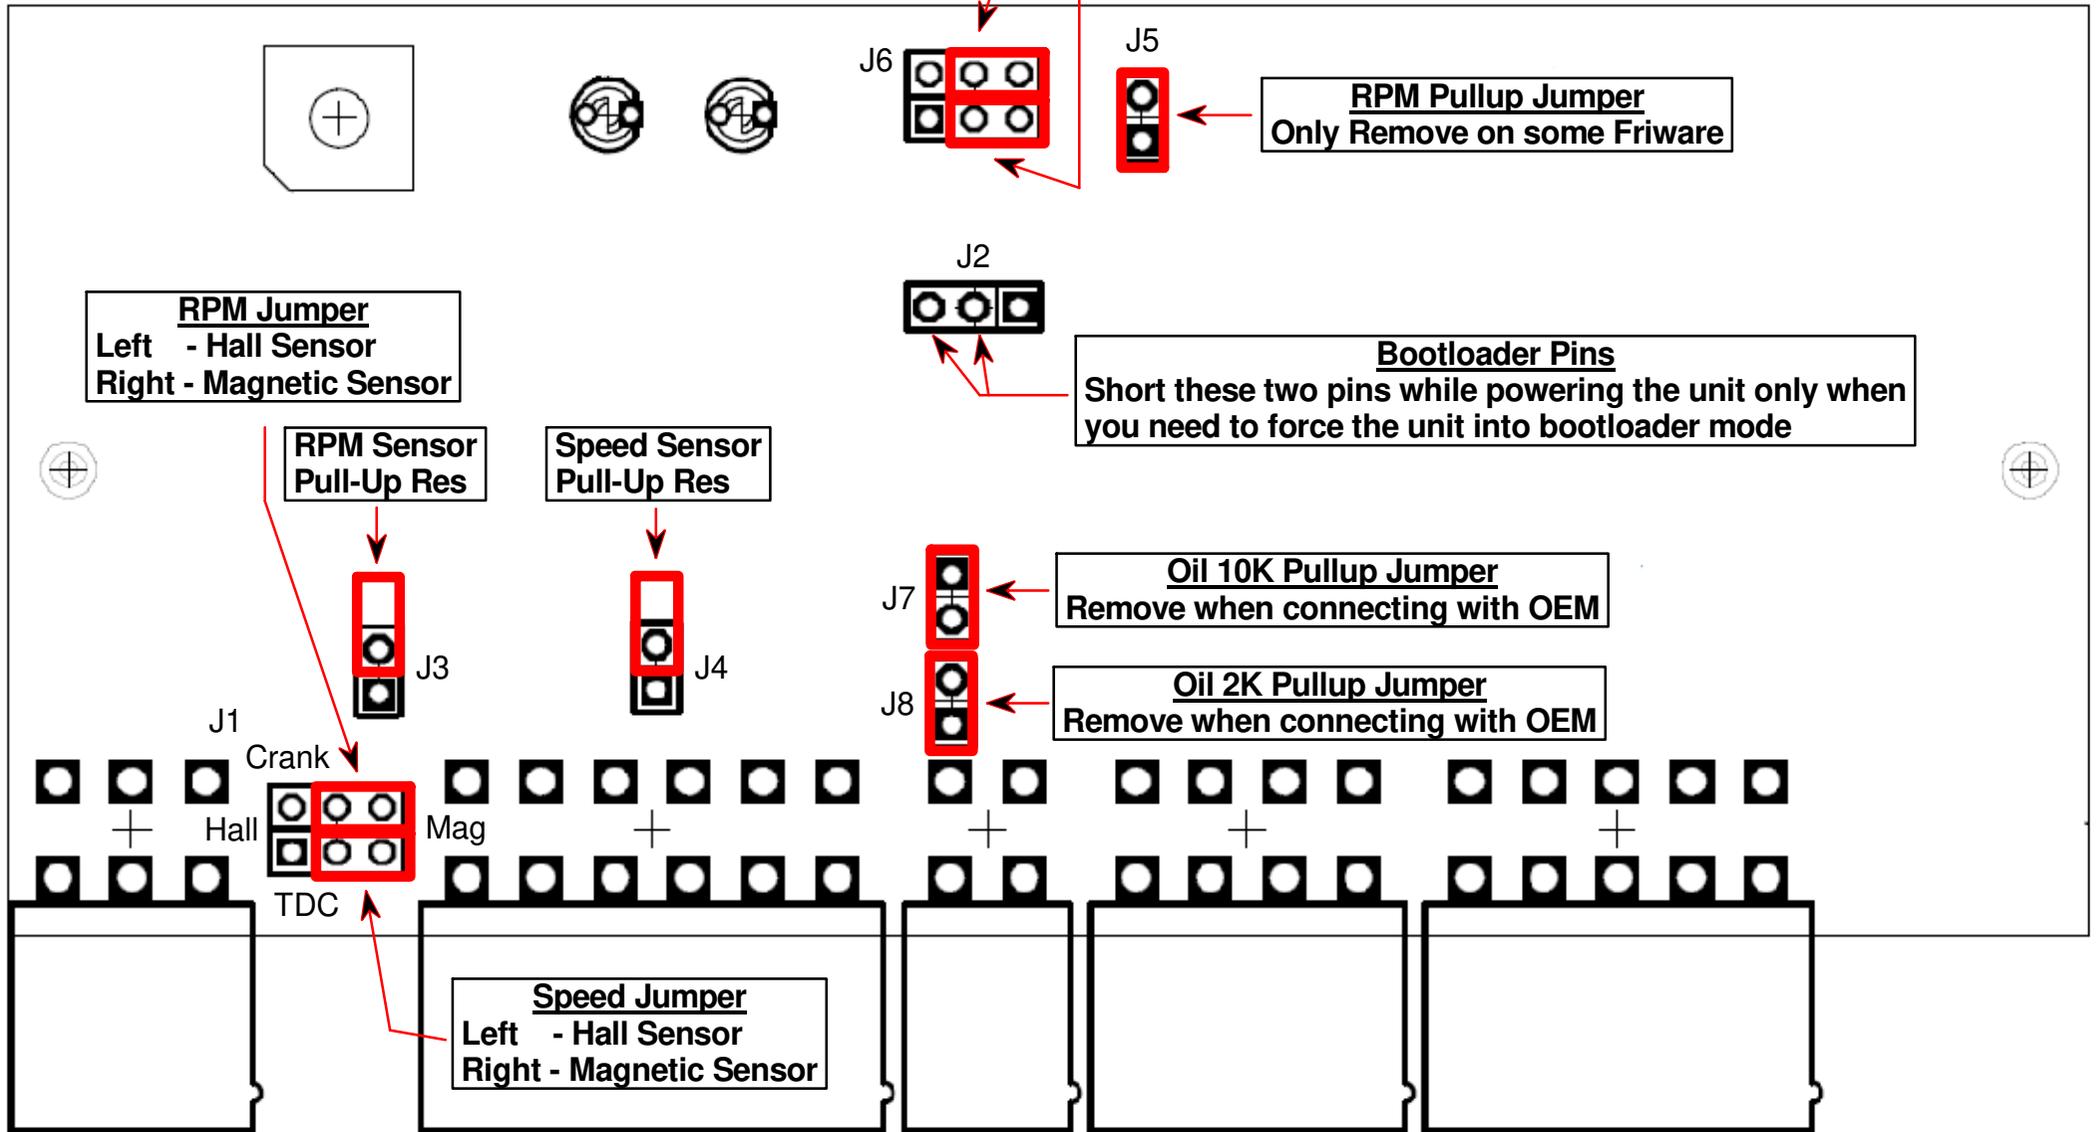


# Orion TCU Jumper Settings

Last Changed: 05/09/2019

**GP4 / Dual Map Jumper**  
Top jumper switch between Down SW and GP4 -  
Keep on GP4 (to the right) when Down SW is not connected

**GP3 / POT Jumper**  
Bottom jumper switch between Up SW and GP3 Output -  
Keep on GP3 (to the right) when Up SW is not connected

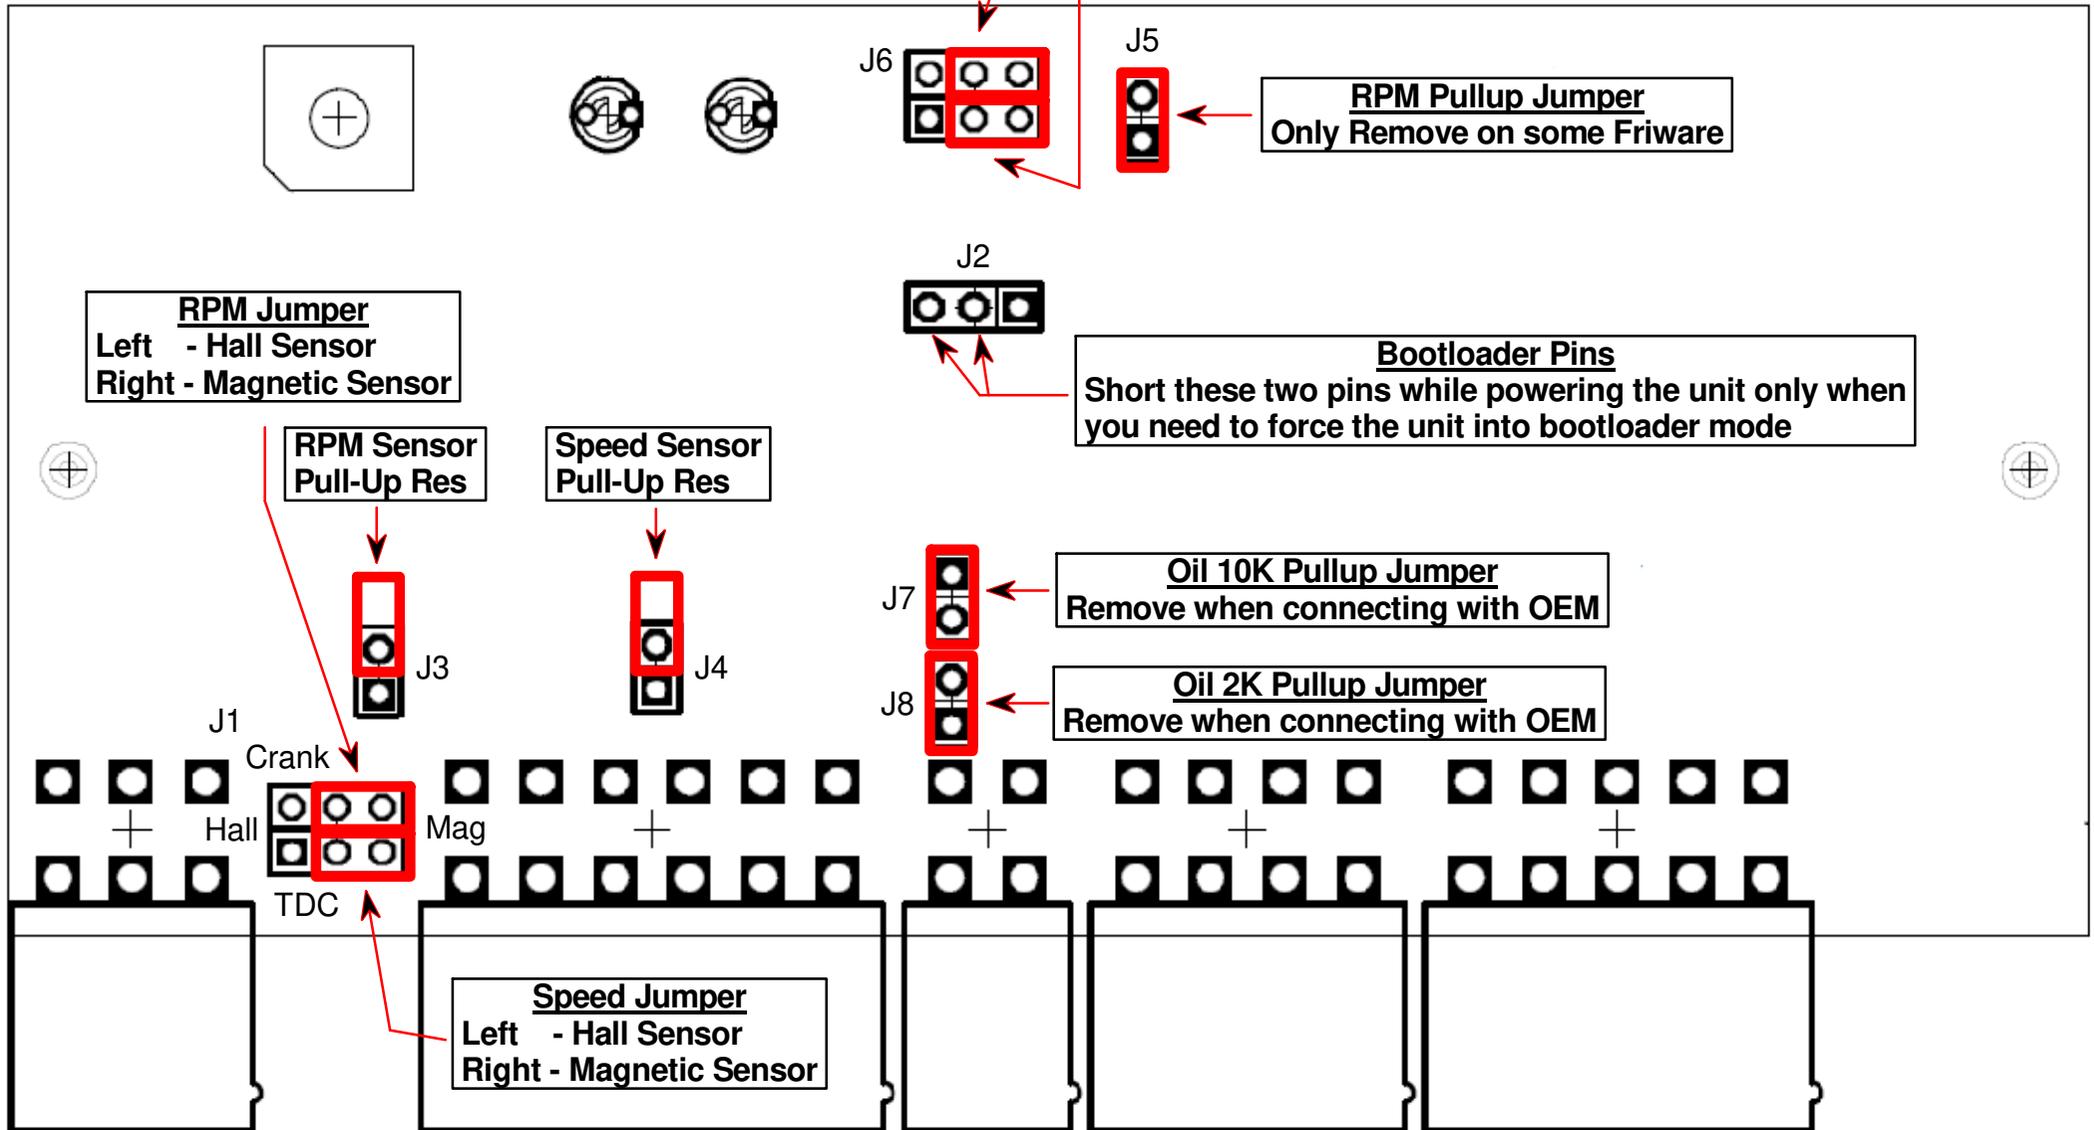

# Orion TCU Jumper Settings

Last Changed: 05/09/2019

**GP4 / Dual Map Jumper**  
Top jumper switch between Down SW and GP4 -  
Keep on GP4 (to the right) when Down SW is not connected

**GP3 / POT Jumper**  
Bottom jumper switch between Up SW and GP3 Output -  
Keep on GP3 (to the right) when Up SW is not connected

**RPM Pullup Jumper**  
Only Remove on some Friware

**RPM Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

**Bootloader Pins**  
Short these two pins while powering the unit only when  
you need to force the unit into bootloader mode

**Oil 10K Pullup Jumper**  
Remove when connecting with OEM

**Oil 2K Pullup Jumper**  
Remove when connecting with OEM

**Speed Jumper**  
Left - Hall Sensor  
Right - Magnetic Sensor

