




Speed Sensor Wiring

Last Changed: 05/09/2019



Harness: OT01-P1 or OT02-P1

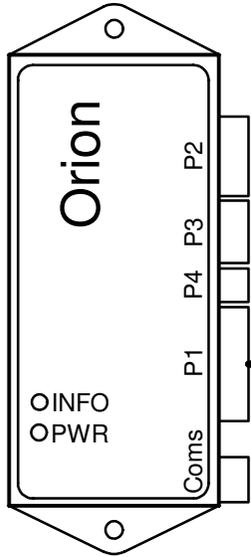


Magnetic Speed Sensor

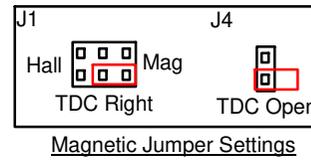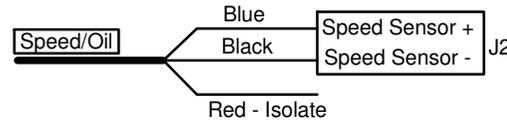


Hall or Optic Speed Sensor

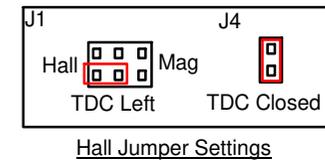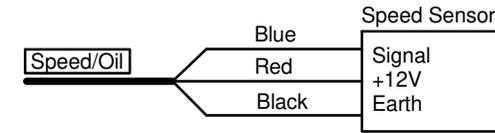


Magnetic Speed Sensor Tap-In and filter

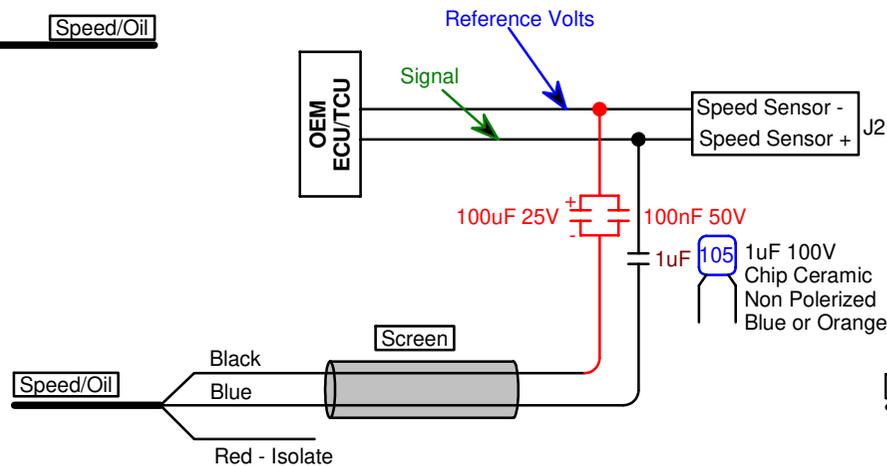

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

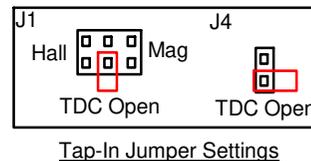

Hall or Optic or Tacho Speed Sensor Tap-In and filter

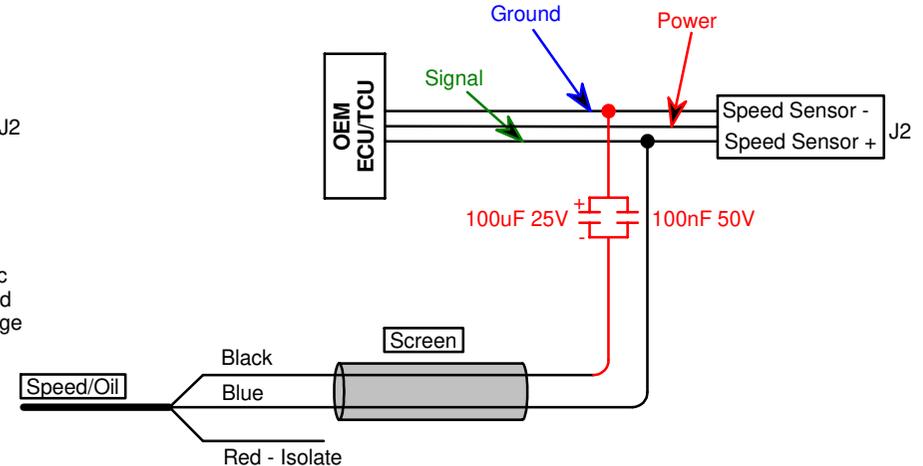

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences


Software Settings

Active Sensors


- RPM
- Speed

Speed Sensor Wiring


Last Changed: 05/09/2019
 Harness: OT01-P1 or OT02-P1

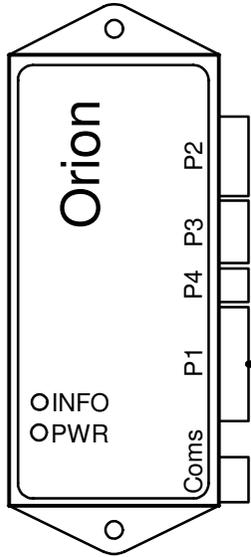


Magnetic Speed Sensor

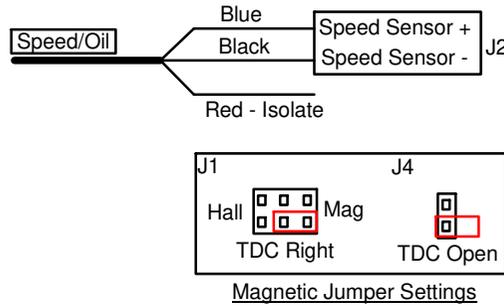

Hall or Optic Speed Sensor

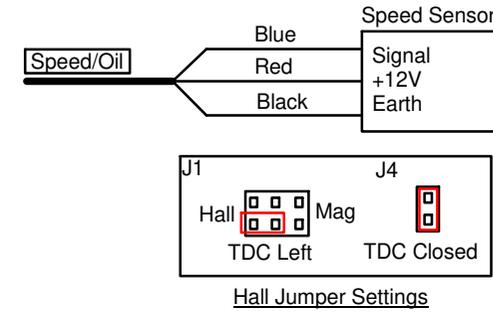


Magnetic Speed Sensor Tap-In and filter

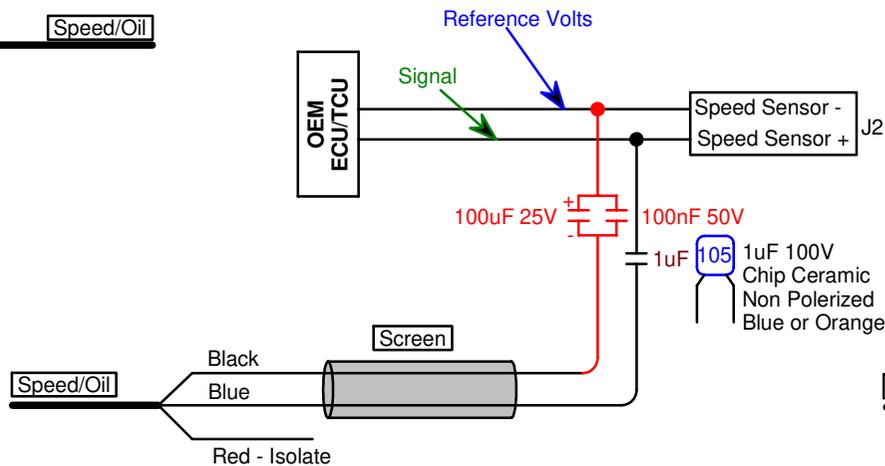


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Hall or Optic or Tacho Speed Sensor Tap-In and filter

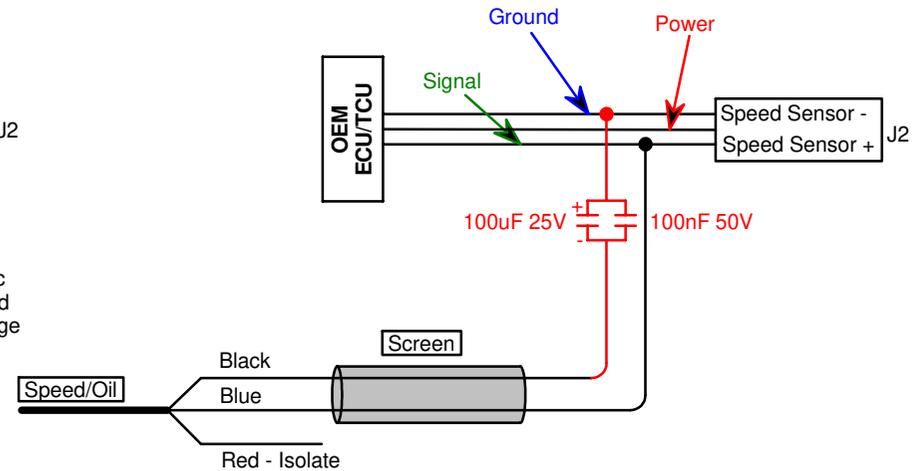

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

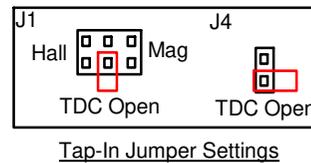


Software Settings




Speed Sensor Wiring


Last Changed: 05/09/2019
 Harness: OT01-P1 or OT02-P1

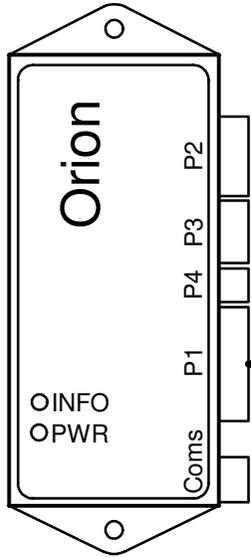


Magnetic Speed Sensor

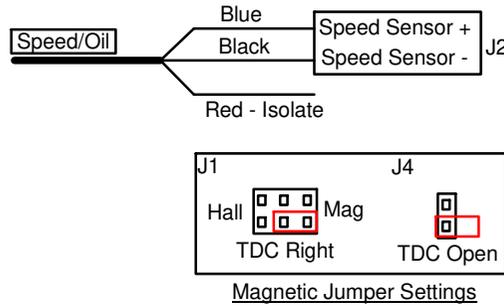


Hall or Optic Speed Sensor

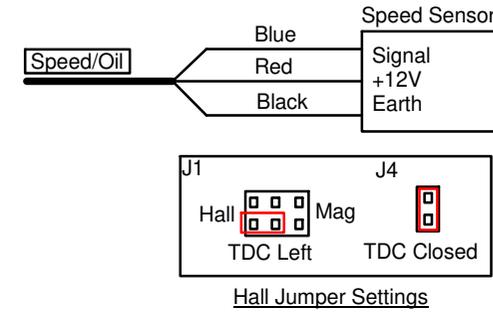


Magnetic Speed Sensor Tap-In and filter

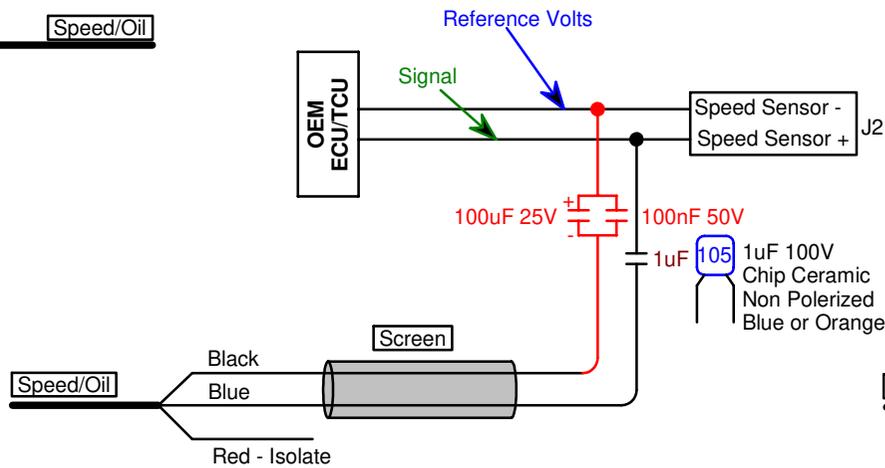

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

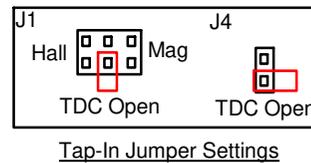


Hall or Optic or Tacho Speed Sensor Tap-In and filter

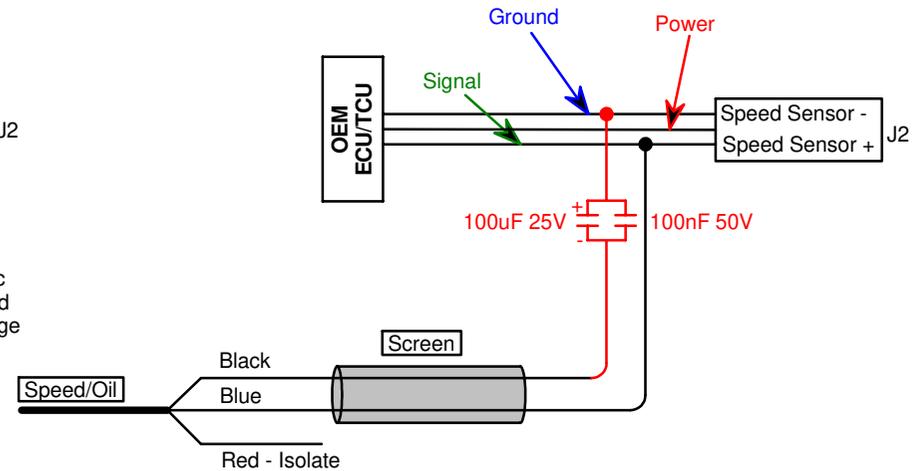


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Software Settings

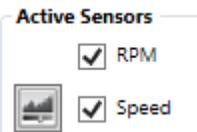


Speed Sensor Wiring


Last Changed: 05/09/2019
 Harness: OT01-P1 or OT02-P1

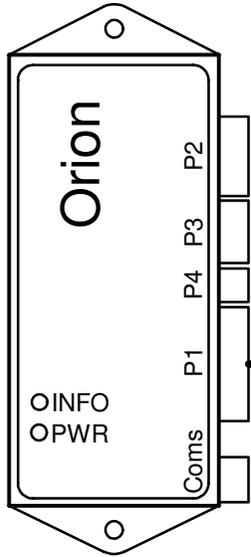


Magnetic Speed Sensor

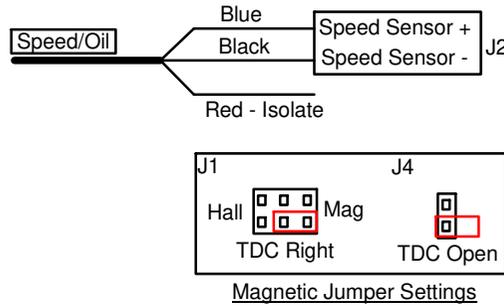


Hall or Optic Speed Sensor

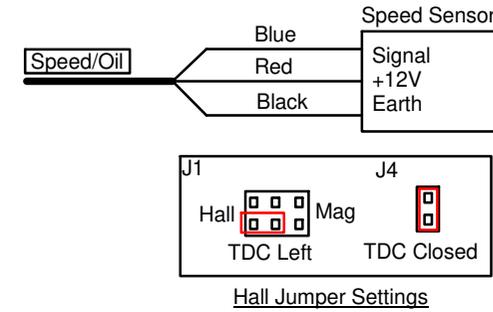


Magnetic Speed Sensor Tap-In and filter

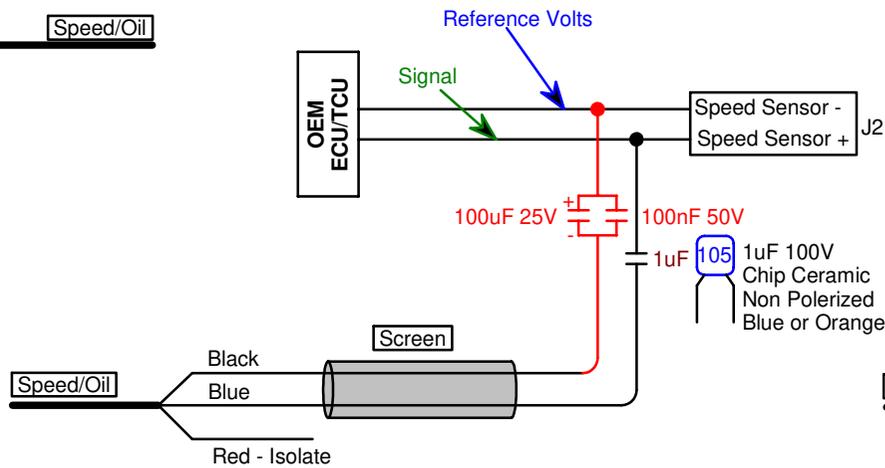

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

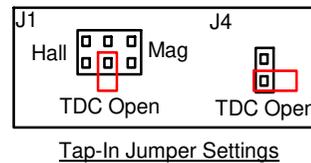


Hall or Optic or Tacho Speed Sensor Tap-In and filter

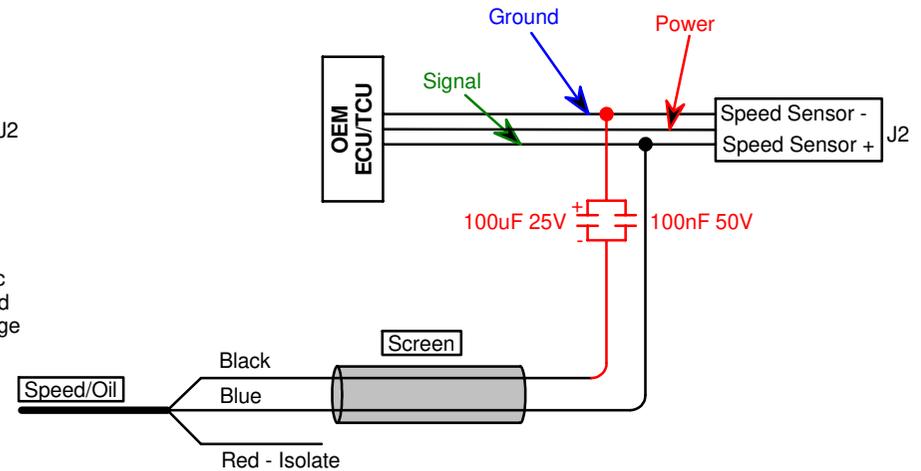


Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Software Settings

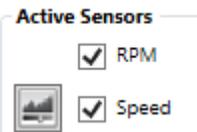


Speed Sensor Wiring


Last Changed: 05/09/2019
 Harness: OT01-P1 or OT02-P1

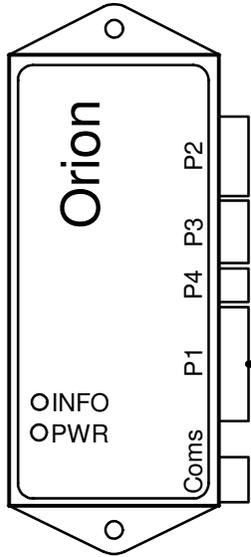


Magnetic Speed Sensor

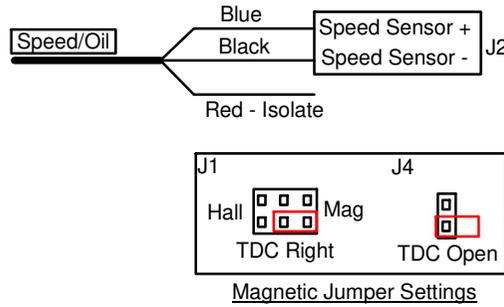


Hall or Optic Speed Sensor

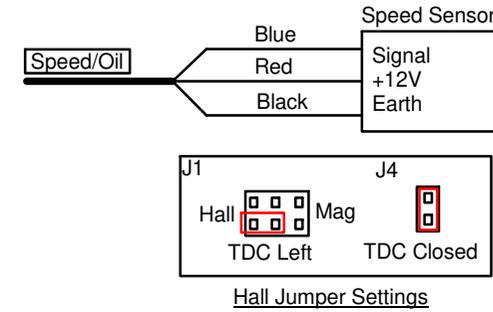


Magnetic Speed Sensor Tap-In and filter

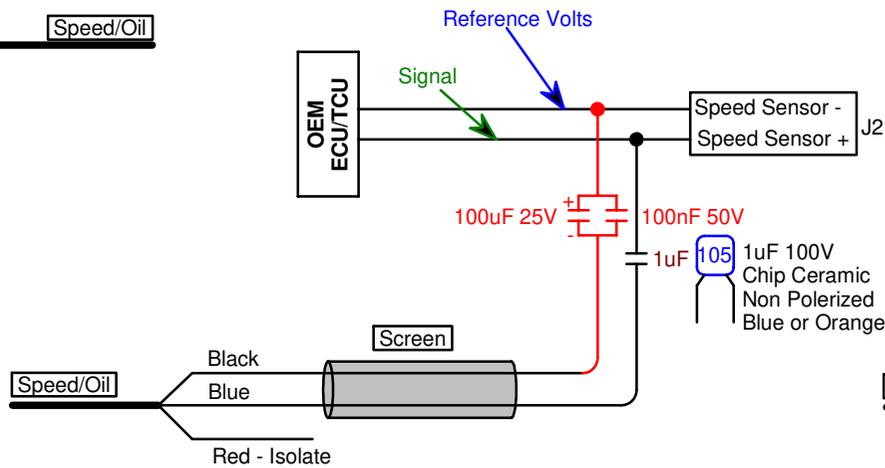

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

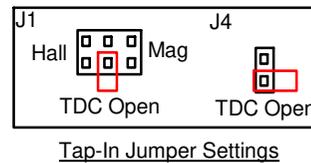

Hall or Optic or Tacho Speed Sensor Tap-In and filter

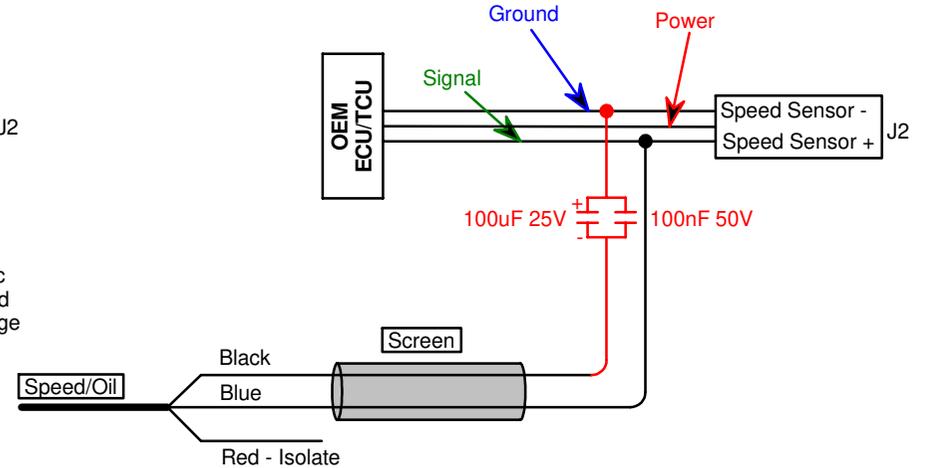

Note! Optional Capacitors from reference to black will help prevent interference in ECU earth differences

Software Settings

