

4Cyl Split Seq Low Imp Dual Injector



Last Changed: 13/11/2017

Harness Required: MEX01-2

A	B	C	D

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Do it for both sets of injectors. Now connect your injector number to the corresponding colour wire.

Note: The order of the injectors will differ on their placing on the engine, as long as it is connected to the same colour wire as this illustration. Two injectors in four pairs will be connected in series because they are pulsed together. Connect them as such. They will share the current and eliminate the need for a series resistor.

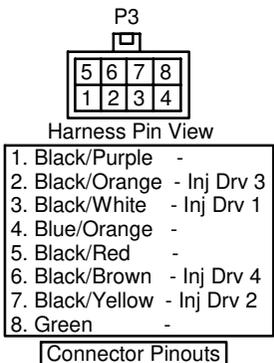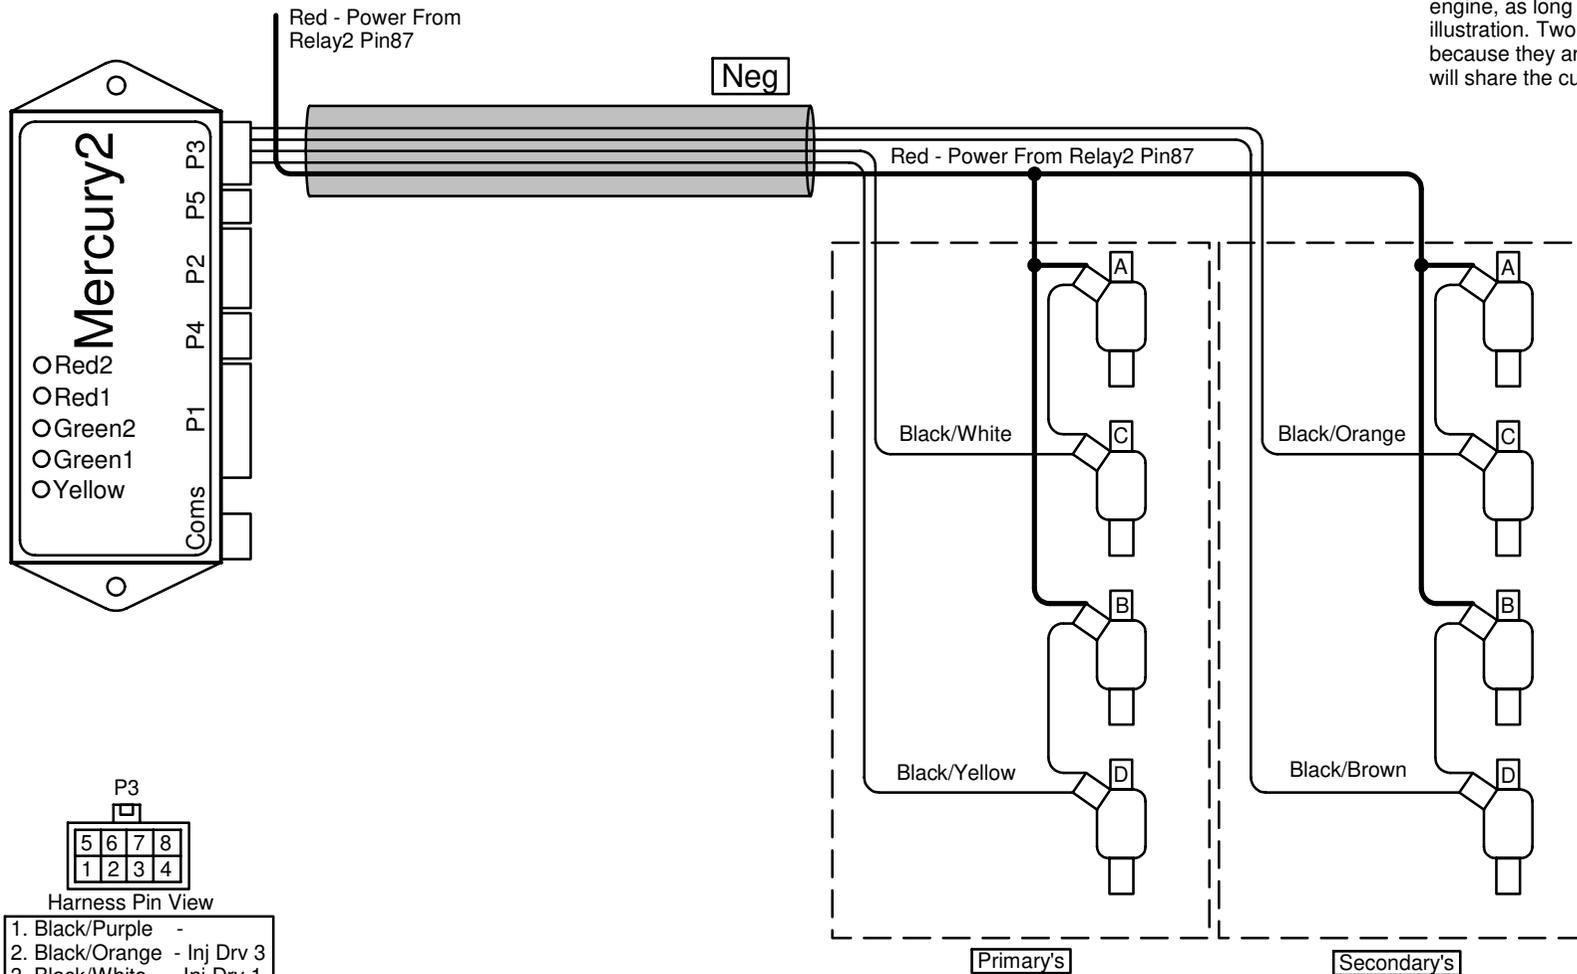

Software Settings

Injection Type

Split Sequential

Micro Fueling Type

Ratio

OR

Micro Fueling Type

Graph