

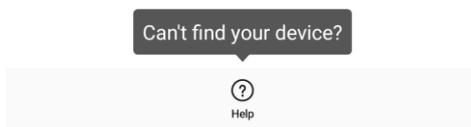


# Bluetooth Installation

Connect the Bluetooth dongle to your product and switch it on. The blue LED will flash meaning it is ready to pair. Open your phone's Bluetooth page and switch Bluetooth on. It should detect Spitronics at the Available Devices column.

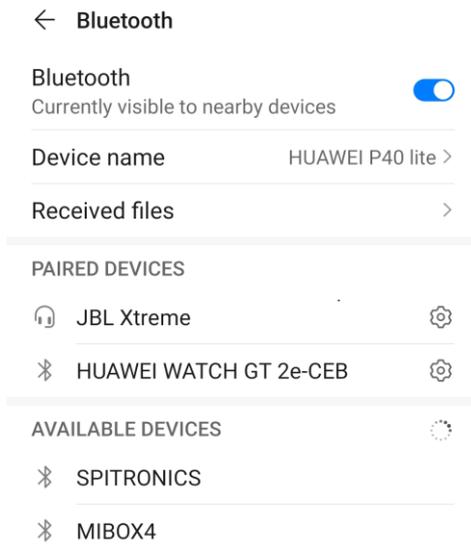

Now Click on Spitronics and it will ask you a paring code which is on your dongle. Enter the pairing code.

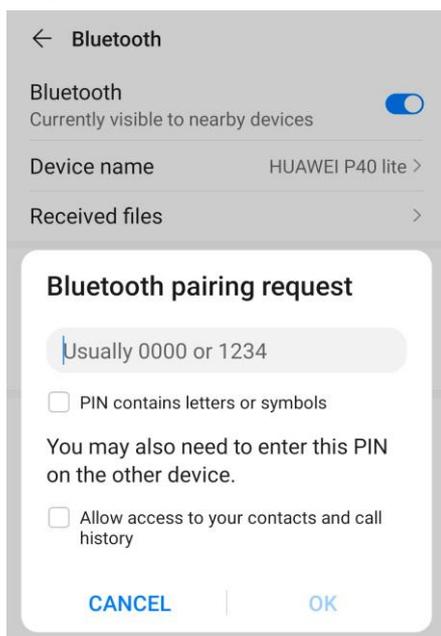

After it is paired it should now sit in the paired devices column.

← Bluetooth

Bluetooth

Currently visible to nearby devices



Device name HUAWEI P40 lite >

Received files >

PAIRED DEVICES

SPITRONICS 

JBL Xtreme 

HUAWEI WATCH GT 2e-CEB 

AVAILABLE DEVICES

MIBOX4 

You can now open the software and connect from that side.