


6Cyl Split Seq 2 High Imp Injector TBI

Last Changed: 08/07/2021


Harness Required: E33

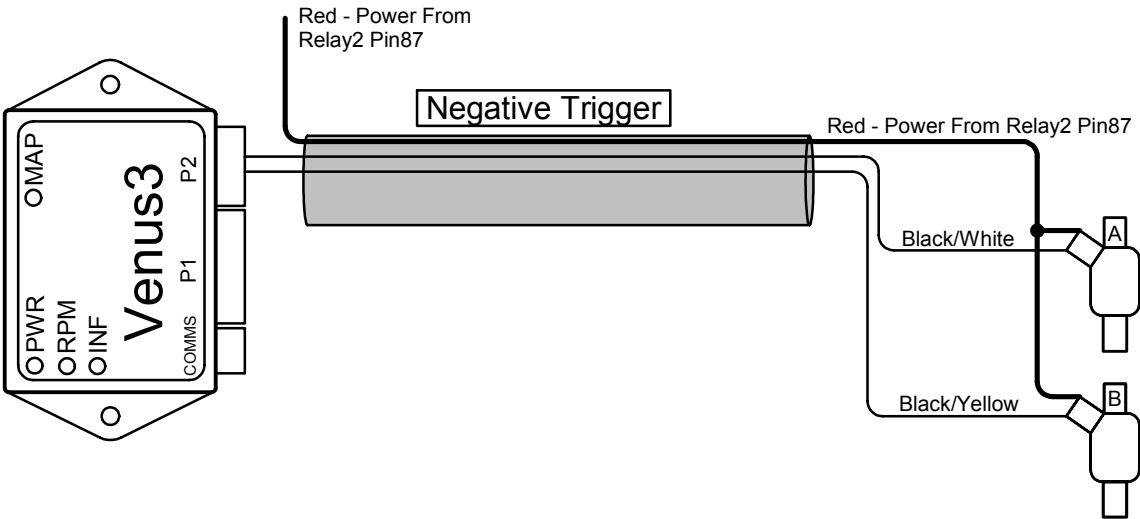

A	B	A	B	A	B
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

Note: The order of the injector placing on the throttle body is determined by the suction of the first 2 cylinders. See where each cylinder is situated on the engine then trace the intake runner to which of the 2 throttles it is connected. Then connect the corresponding colour wire.

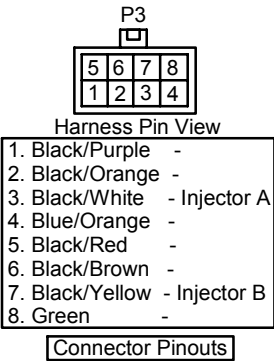

Software Settings

Injection Type

Split Sequential

Micro Fueling Type

Off