


# 8Cyl Split Seq 4 High Injector TBI

Last Changed: 08/06/2021


Harness Required: E33

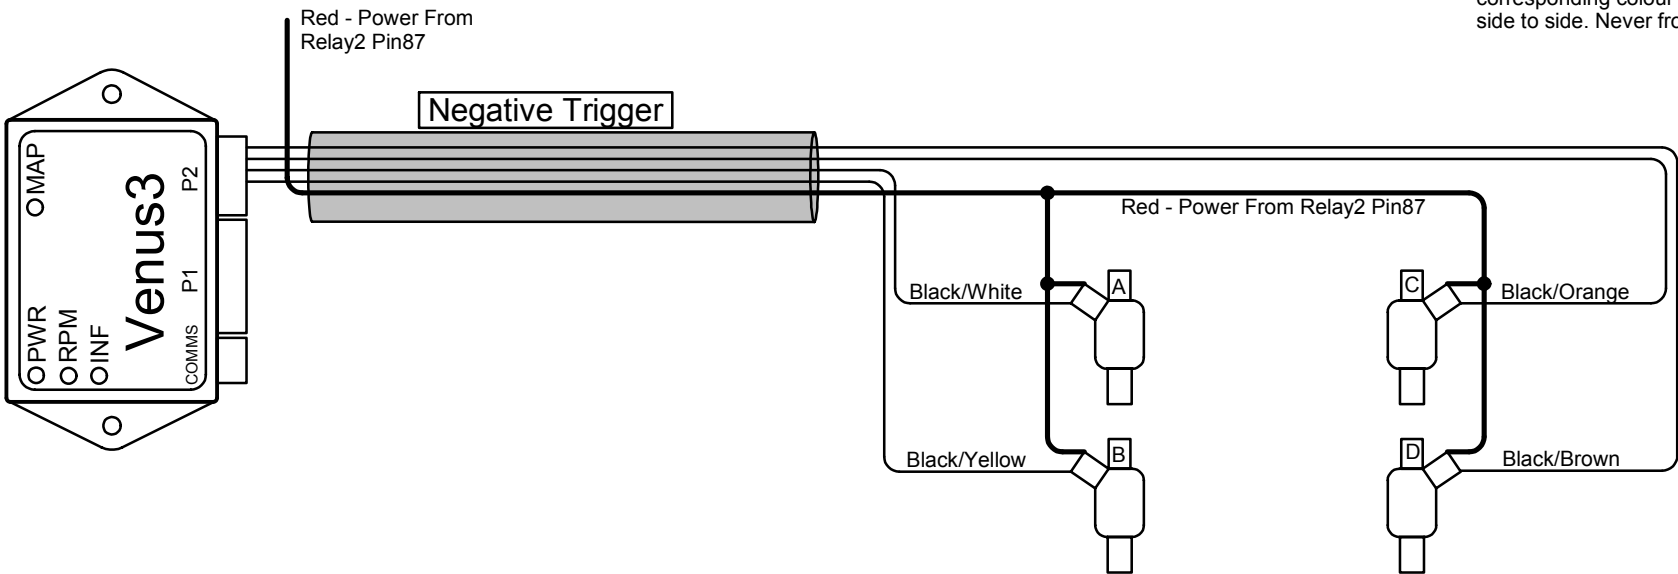

A	B	C	D	A	B	C	D

Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below. Now connect your injector number to the corresponding colour wire.

**Note:** The order of the injector placing on the throttle body is determined by the suction of the first 4 cylinders. See where each cylinder is situated on the engine then trace the intake runner to which of the 4 throates it is connected. Then connect the corresponding colour wire. The injection should always rotate from side to side. Never front to back. See the ilustration below.

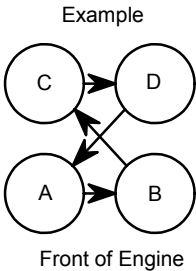

P2

6	7	8	9	10
1	2	3	4	5

Harness Pin View

1. Black/Purple	-
2. Black/Orange	- Injector C
3. Black/White	- Injector A
4. Blue	-
5. Blue/Orange	-
6. Black/Red	-
7. Black/Brown	- Injector D
8. Black/Yellow	- Injector B
9. Green	-
10. Blue/White	-

Connector Pinouts

Software Settings

Injection Type

Split Seq 2x Inj Per Driver

Injector Driver Outputs

Injector Driver Output 1 Coil Negative 6

Injector Driver Output 2 Coil Negative 5

Injector Driver Output 3 Coil Negative 4

Injector Driver Output 4 Coil Negative 3