



# 4Cyl Full Seq High Imp Injector Add-on


Last Changed: 13/11/2017

Harness Required: MEX01-2 + IS4X01-2

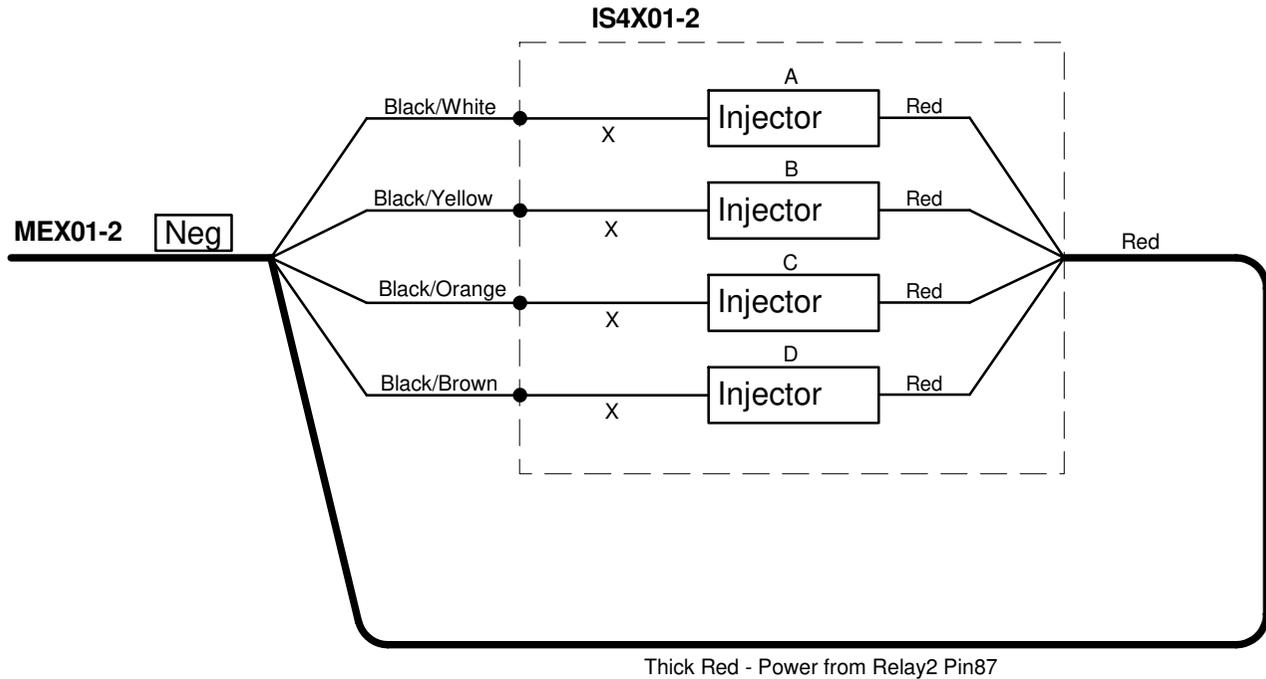


Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below.

**Note:** The order of the injectors will differ on the placing on the engine, as long as it is connected to the same colour wire as this illustration.

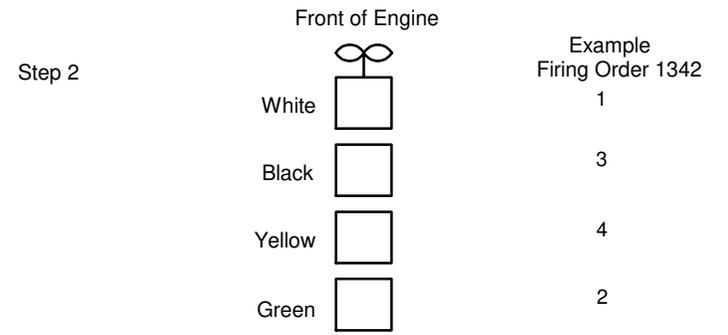

Write the cylinder layout of your engine in the blocks above. Start with No1 cylinder in the front and fill it in to the back. Note that it will not be numbered as the cylinders but according to the fire order. Then write the corresponding colour of each cylinder next to your injector number on the lines marked X on the drawing. This will ensure that the sequence of injection is correct.

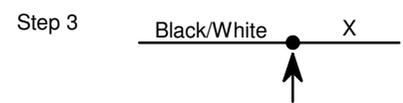

Solder joints and cover it with shrink sleeve

IS4X01-2 = Harness Part numbers  
MEX01-2 = Harness Part numbers

**Neg** = Harness Tag Name

Software Settings

**Injection Type**

**Micro Fueling Type**