



6Cyl V Split Seq High Imp Injector Add-on


Last Changed: 13/11/2017

Harness Required: MEX01-2 + IV6X01-2

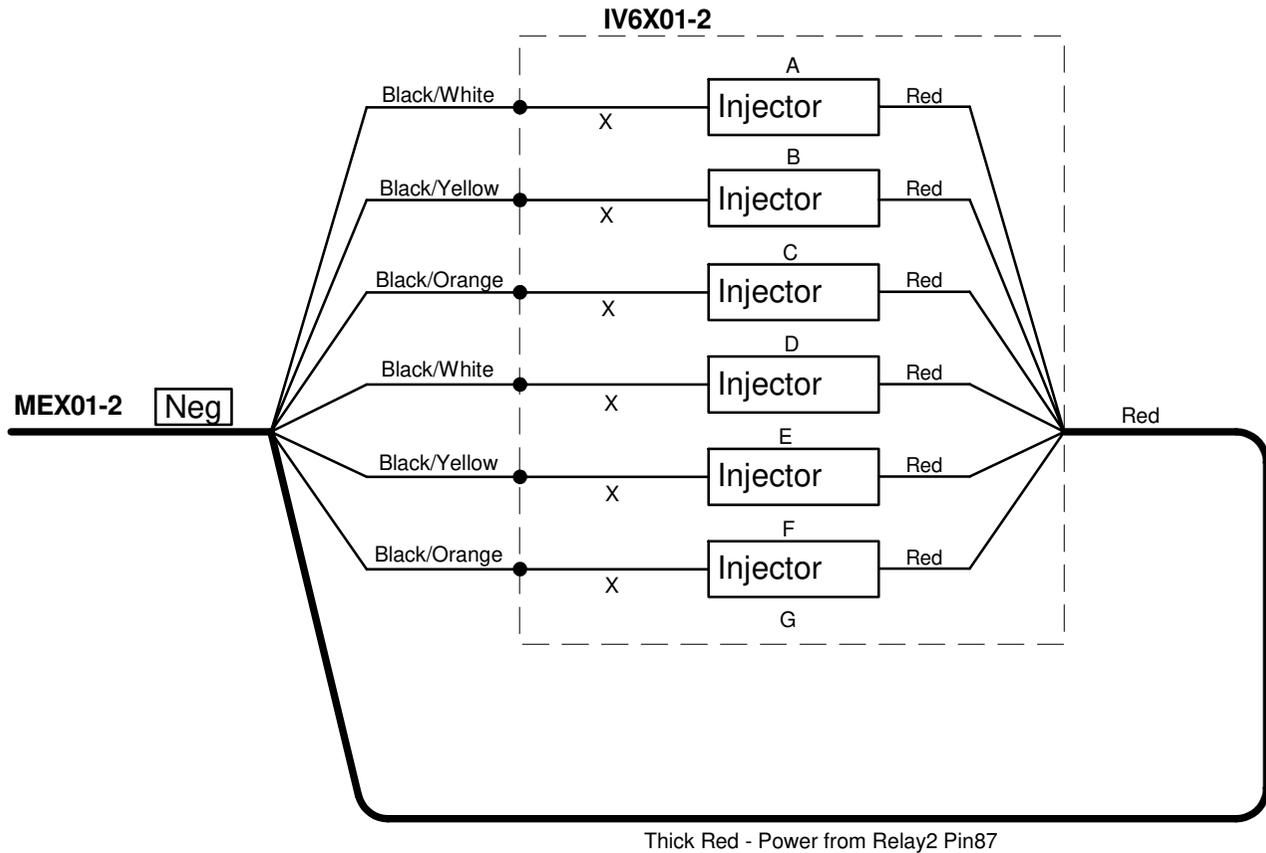


Write your firing order from left to right in the blocks above marked with an alphabetical letter. Then write the corresponding number on the corresponding injector with the same alphabetical letter in the drawing below.

Note: The order of the injectors will differ on the placing on the engine, as long as it is connected to the same colour wire as this illustration. Two coils are connected to one wire colour from the MEX01-2 as they are pulsed together. Connect them as such.

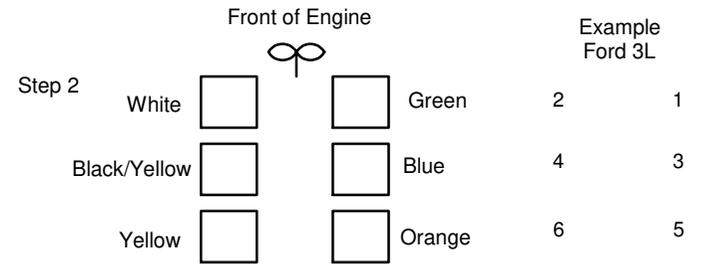

Write the cylinder layout of your engine in the blocks above. Make sure which side is the No1 cylinder and how they are numbered on your engine. Then write the corresponding colour of each cylinder next to your injector number on the lines marked X on the drawing. This will ensure that the sequence of injection is correct.

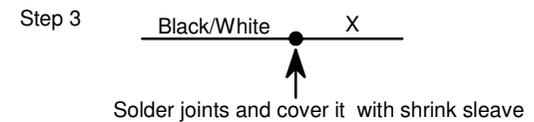

IV6X01-2 = Harness Part numbers
MEX01-2 = Harness Part numbers

Neg = Harness Tag Name

Software Settings

Injection Type

Split Sequential

Micro Fueling Type

Off