

TITAN Lexus Econo

Harness Required: E24 Ver 1.0 & E27 Ver 1.0


Last Changed: 27/07/2010

Drawing Ver: 1.0


Ign+
Ignition Power
Earth

Terminal Connections with the same name are tied together

Led's Functions
Yellow - Power
Green - RPM Pulse

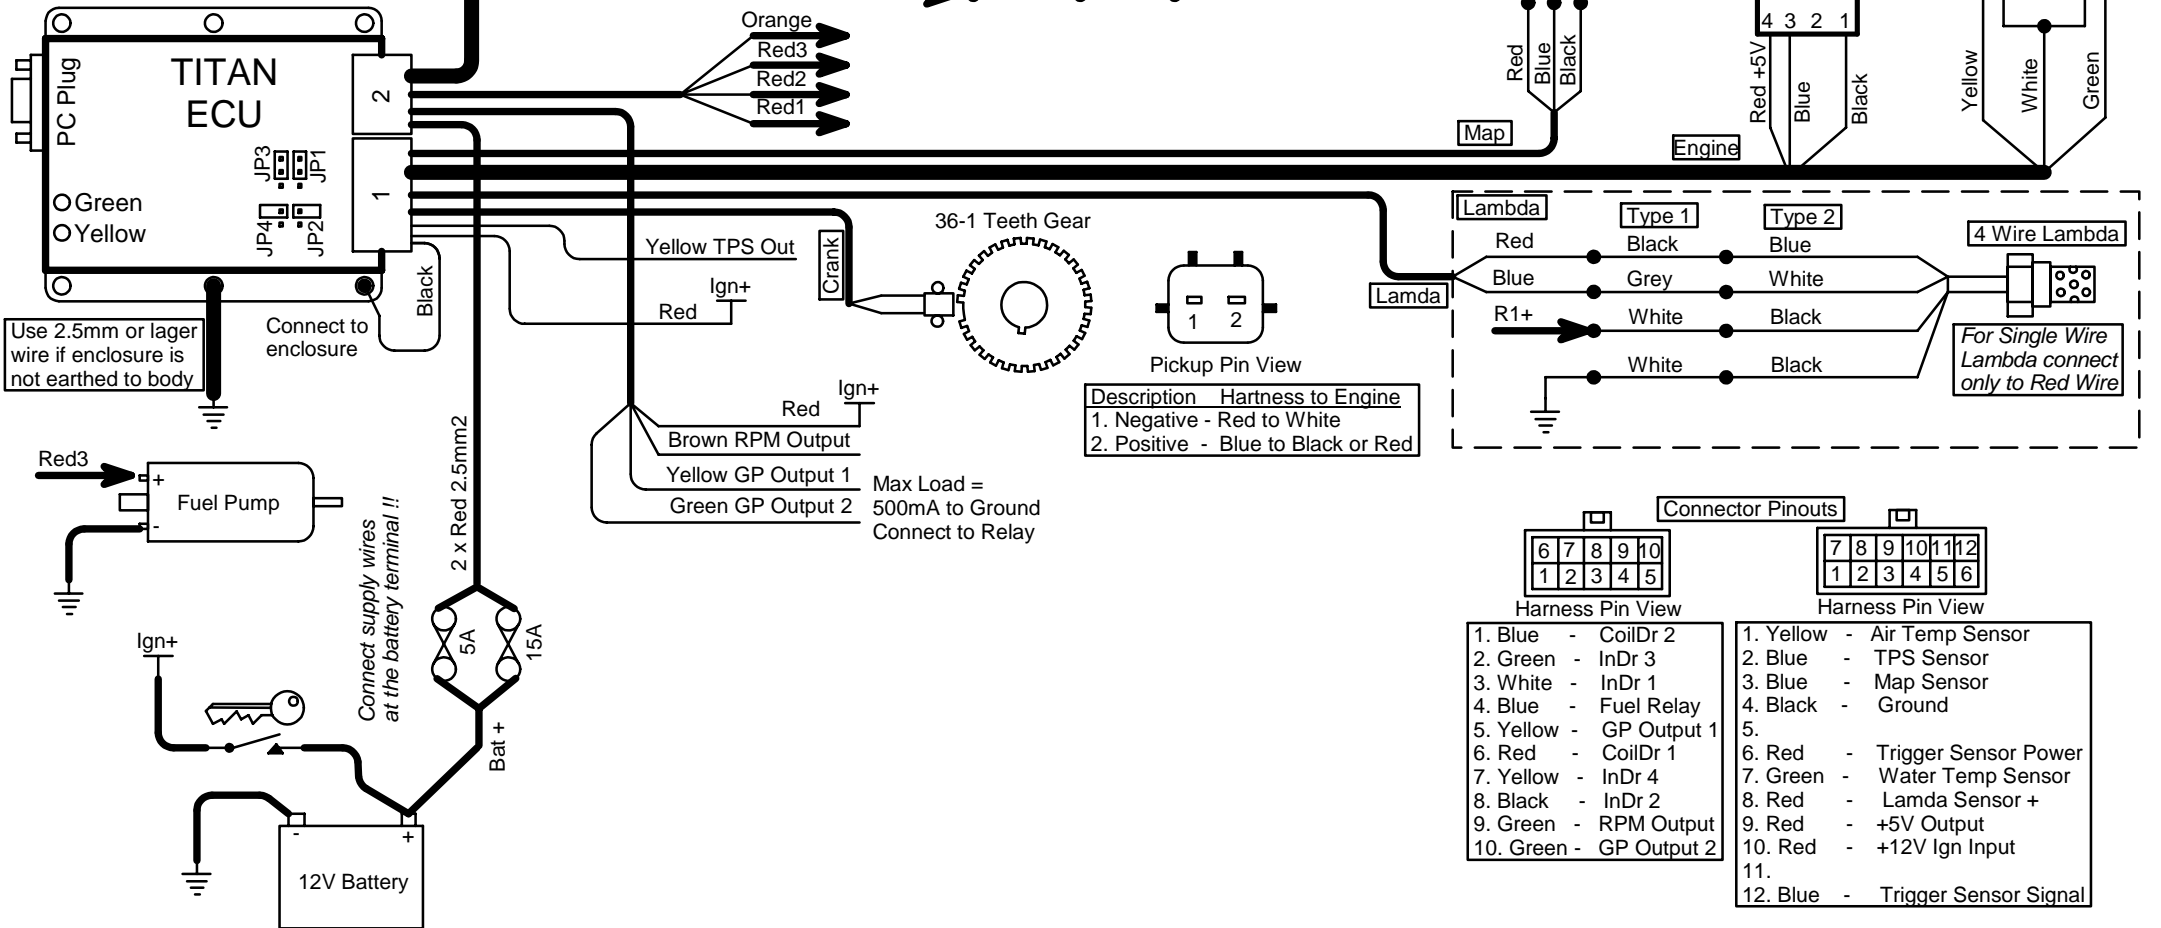

Description **Harness to Engine**
1. Negative - Red to White
2. Positive - Blue to Black or Red

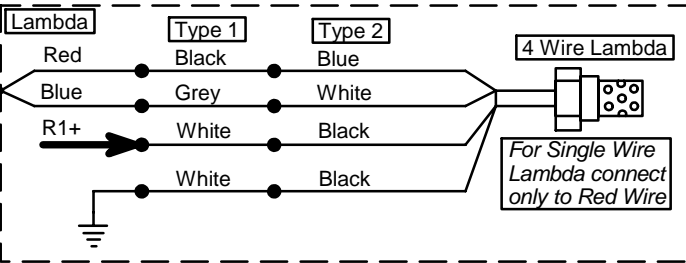

Connector Pinouts

Harness Pin View					Harness Pin View					
6	7	8	9	10	7	8	9	10	11	12
1	2	3	4	5	1	2	3	4	5	6

1. Blue	-	CoilDr 2	1. Yellow	-	Air Temp Sensor
2. Green	-	InDr 3	2. Blue	-	TPS Sensor
3. White	-	InDr 1	3. Blue	-	Map Sensor
4. Blue	-	Fuel Relay	4. Black	-	Ground
5. Yellow	-	GP Output 1	5.		
6. Red	-	CoilDr 1	6. Red	-	Trigger Sensor Power
7. Yellow	-	InDr 4	7. Green	-	Water Temp Sensor
8. Black	-	InDr 2	8. Red	-	Lamda Sensor +
9. Green	-	RPM Output	9. Red	-	+5V Output
10. Green	-	GP Output 2	10. Red	-	+12V Ign Input
			11.		
			12. Blue	-	Trigger Sensor Signal