


1Cyl Low Imp Injector Option1

Last Changed: 16/09/2020
Harness Required: E33

Note! This connections is used with Basic Coils

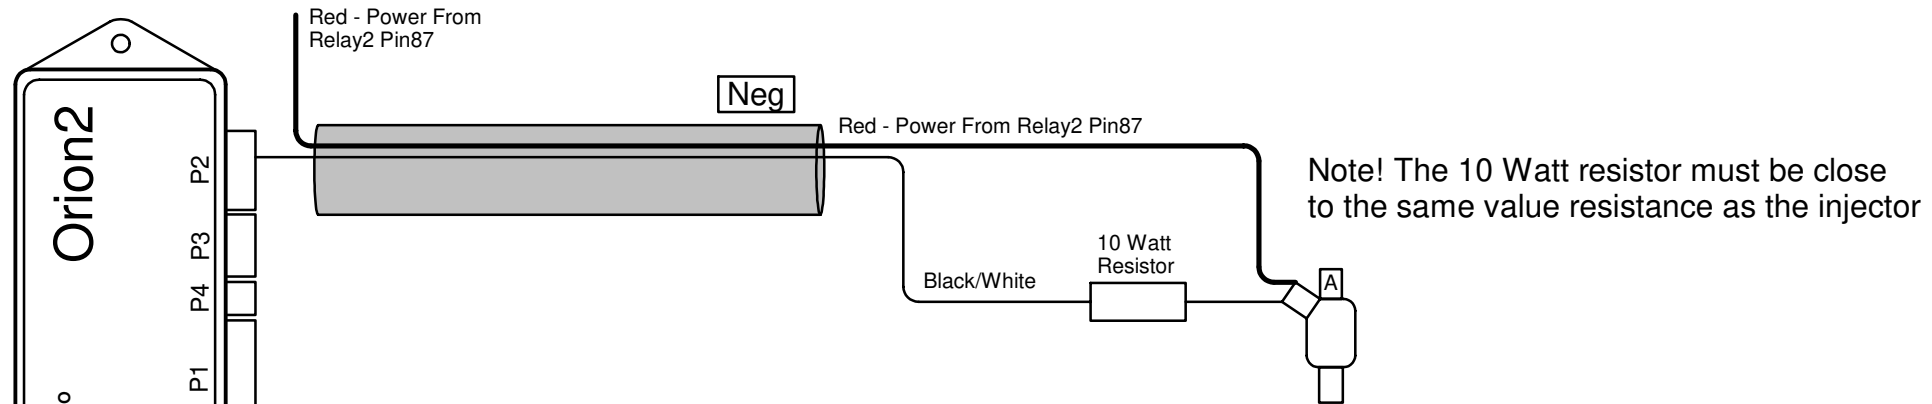

Software Settings

Coil Driver Trigger Combination ⚠

Basic Coil - Use Coil Negative Drivers

Injection Type ⚠


Full Sequential

OR

Split Seq 1x Inj Per Driver

Injector Driver Outputs

Injector Driver Output 1 **Negative 1**



Harness Pin View

- 1. Black/Purple -
- 2. Black/Orange -
- 3. Black/White - Injector A
- 4. Blue -
- 5. Blue/Orange -
- 6. Black/Red -
- 7. Black/Brown -
- 8. Black/Yellow -
- 9. Green -
- 10. Blue/White -

Connector Pinouts